

# EC type-examination Certificate

Number **T10201** revision 10  
Project number SO15202532  
Page 1 of 1

Issued by	NMI Certin B.V., designated and notified by the Netherlands to perform tasks with respect to conformity modules mentioned in article 9 of Directive 2004/22/EC, after having established that the Measuring instrument meets the applicable requirements of Directive 2004/22/EC, to:
Manufacturer	KROHNE Altometer Kerkeplaat 12 3313 LC Dordrecht The Netherlands
Measuring instrument	<b>A water meter</b> Type : WATERFLUX 3070 Environment classes : M2 / E2 Temperature range liquid : +0,1 °C / +50 °C Temperature range ambient : -10 °C / +55 °C Measuring range : See § 1.2 of the description  Further properties are described in the annexes: – Description T10201 revision10; – Documentation folder T10201-5.
Valid until	10 September 2019
Remark	This revision replaces the previous versions, except for its documentation folder.

Issuing Authority **NMI Certin B.V., Notified Body number 0122**  
13 July 2015

  
C. Oosterman  
Head Certification Board

**NMI Certin B.V.**  
Hugo de Grootplein 1  
3314 EG Dordrecht  
The Netherlands  
T +31 78 6332332  
certin@nmi.nl  
www.nmi.nl

This document is issued under the provision  
that no liability is accepted and that the  
manufacturer shall indemnify third-party  
liability.

The designation of NMI Certin BV.as Notified  
Body can be verified at [http://  
ec.europa.eu/enterprise/newapproach/nando/](http://ec.europa.eu/enterprise/newapproach/nando/)

Parties concerned can lodge  
objection against this decision,  
within six weeks after the date of  
submission, to the general manager  
of NMI (see [www.nmi.nl](http://www.nmi.nl)).

Reproduction of the complete  
document only is permitted.

## 1 General information on the water meter

All properties of this water meter, whether mentioned or not, shall not be in conflict with the legislation.

### 1.1 Essential parts

Description	Document	Remarks
Measurement sensor	10201/0-01 10201/0-02 10201/8-01	The inside of the cylindrical measuring tube is provided with a rectangular-like flow cross-section profile. The internal flow sensor is covered with an insulating liner. Through the liner, the 3 electrodes are in contact with the liquid. The flow sensor is equipped with a magnetic circuit containing 2 electromagnetic coils.
Printed circuit board	10201/0-05 10201/4-01 10201/8-03 10201/8-04 10201/8-05	IFC 070 flow converter Signal Converter and meter reading. Used to drive the magnetic spools and convert the electrode voltage to a flow rate.

### 1.2 Essential characteristics

#### 1.2.1 Flow characteristics

Meter size	Flow rates [m <sup>3</sup> /h]			
	Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
DN25	0,025	0,04	16	20
DN40	0,0625	0,1	40	50
DN50	0,1	0,16	63	78,75
DN65	0,1575	0,252	100	125
DN80	0,25	0,40	160	200
DN100	0,40	0,64	250	312,5
DN125	0,625	1,00	400	500
DN150	1,00	1,60	630	787,5
DN200	1,575	2,52	800	1000
DN250	2,5	4	1000	1250
DN300	4,0	6,4	1600	2000
DN350	15,625	25	2500	3125
DN400	25	40	4000	5000
DN450	25	40	4000	5000

Meter size	Flow rates [m <sup>3</sup> /h]			
	Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
DN500	39,375	63	6300	7875
DN600	63	100,8	6300	7875

Please note that the flow rates Q1, Q2, Q3 and Q4 can be freely chosen as long as:

- Values mentioned for Q1 and Q2 are minimum values;
- Values mentioned for Q3 and Q4 are maximum values;
- The ratio Q3/Q1 is at least 10; the ratio Q2/Q1 = 1,6 and the ratio Q4/Q3 = 1,25.

### 1.2.2 Measuring principle

In documentation 10201/0-01 the measuring principle is described.

### 1.2.3 Bi-directional flow

The sensor can be used to measure flow in forward and reverse directions. See also the conditions as stated in chapter 3.

### 1.2.4 Software specification (refer to WELMEC guide 7.2):

- Software type P;
- Risk Class C;
- Extensions L, D, S and T are not applicable.

Software versions	Remarks
4.0.4_, 4.0.10_, 4.0.11_, 4.0.12_, 4.2.2_, 4.2.4_, 4.2.5_, 4.2.6_, 4.3.0_, 4.3.1_	The software version is displayed after operating the right-hand infrared key.

### 1.2.5 Operation and presentation of legal data

The meter is standard equipped with an electronic display and can be operated using the infrared keys on the display module. The operation is further described in documentation 10201/0-01. Only the totalizers and pulse output A and B are approved for custody transfer purposes.

The measured volume is presented by means of an electronic display.

The display register is built up as follows:

Meter Size	Indicating range [m <sup>3</sup> ]	Verification scale interval [m <sup>3</sup> ]
DN25	99.999.999	0,00001
DN40, DN50, DN65 and DN80	99.999.999	0,0001
DN100, DN125, DN150, DN200 and DN250	99.999.999	0,001
DN300, DN350, DN400, DN450	99.999.999	0,01
DN500 and DN600	99.999.999	0,1

The parameter "counter multiplier value" has to be set to 1. See documentation 10201/0-01.

## 1.2.6

### Accountable alarms

If malfunctions are detected a visible alarm will be displayed which remains present until the alarm is acknowledged and the cause of the alarm is suppressed.

During the accountable alarms the registration of the volume in the totalizers is stopped.

The validity of the program and the parameters is continuously checked. If these checks fail, an alarm is generated.

## 1.2.7

### Maximum operating pressure:

- 16 bar(g) for sizes DN200 and smaller;
- 10 bar(g) for sizes DN250 and larger.

## 1.3

### Essential shapes

### 1.3.1

#### Markings:

- The markings have to fulfil the requirements stated in the legislation.
- For the remote version:
  - The serial number of the signal converter is mentioned on the measurement sensor and/or the serial number of the measurement sensor is mentioned on the signal converter.

An example of the markings is given in documentation 10201/0-03.

### 1.3.2

#### Signal converter

The signal converter is mounted either:

- Directly on the measurement sensor, this is called the compact version.
- Separately from the measurement sensor, this is called the remote version.  
A single shielded cable connects the sensor to the signal converter.

### 1.3.3

#### Inlet pipe and outlet pipe

Minimum straight inlet pipe: 0 D

Minimum straight outlet pipe: 0 D

## 1.4

### Conditional parts

### 1.4.1

#### Housing

The housing of the Signal Converter consists of either:

- a metallic housing with a compact and a remote version.  
See documentation 10201/0-04, 10201/2-01 and 10201/8-02.
- a plastic housing with a compact version only.  
See documentation 10201/2-02.

### 1.4.2

#### Cabling remote reading

When the meter is executed as a remote version the cable between the measuring sensor and reading unit should be mounted fixed. During use it should not be possible to move this cable.

### 1.4.3

#### Power supply

The water meter is powered by one or two 3,6 Volts D-cell Lithium primary (non-rechargeable) batteries. The replacement date of the battery shall be indicated on the meter.

A low battery alarm is generated one year before the meter stops functioning (based on actual settings and measuring situation).

## 1.5 **Conditional characteristics**

### 1.5.1 Programming

Essential parameters, see documentation 10201/0-01, cannot be changed after the access control function is set for "fiscal metering". In order to disable the "fiscal metering" a seal has to be broken, see documentation 10201/0-01.

The access control function is menu item 13 for software versions 4.0.x<sup>[1]</sup> and menu item 1 for software versions 4.2.x\_ and 4.3.x<sup>[1]</sup>. See documentation 10201/0-01.

### 1.5.2 Low flow cut off

The low flow cut off is a programmable minimum flow. If the flow measured by the meter is below the programmed low flow cut off, the flow will be considered zero and the meter reading will no longer change

The programmed value cannot not exceed 10 mm/s, see documentation 10201/0-01.

## 1.6 **Conditional shapes**

### 1.6.1 Cylindrical pipe with a rectangular-like flow profile

The cylindrical pipe and the internal rectangular like flow cross-section profile are constructed so that the combination of material and wall thickness is such that the influence due to changing liquid pressure is negligible.

## 1.7 **Non-essential parts**

- Single channel pulse output (optional).  
This is an extra printed circuit board stacked to the printed circuit board mentioned in paragraph 1.1. This pulse output may not be used for the legal transmission of measured volume.  
See documentation 10201/4-02 and 10201/8-06.
- Temperature and pressure sensor and transmitter, compact version only (optional).  
The temperature and pressure sensor are mounted in the measurement sensor. The corresponding electronics is mounted in the signal converter.  
The measured value can be displayed for information purposes only. The values may not be used for conversions.

## 1.8 **Non-essential shapes**

- Alarm and pulse outputs (double channel for legal transmission of the measured volume)

---

<sup>[1]</sup> With x being any number.



# Description

Number **T10201** revision 10  
Project number SO15202532  
Page 5 of 5

## 2 Seals

The following seals are applied:

- The data plate is fixed to the water meter and secured against removal by seal or it will be destroyed when removed.
- The hardware switch located inside the electronics unit is sealed against activation. This prevents the access control function (see paragraph 1.5.1) from being unlocked.
- The electronics unit is sealed against removal.

See the drawing numbers 10201/0-04, 10201/2-01, 10201/2-02 and 10201/8-02 for examples of the seals.

## 3 Conditions for Conformity Assessment

- Bi-directional flow measurement  
During conformity assessment it is sufficient to verify a bi-directional meter only in one direction.