



## OPTITEMP TT 30 C/R Handbook

Intelligent two wire universal transmitter

The documentation is only complete when used in combination with the relevant documentation for the sensor.

All rights reserved. It is prohibited to reproduce this documentation, or any part thereof, without the prior written authorisation of KROHNE Messtechnik GmbH.

Subject to change without notice.

Copyright 2012 by  
KROHNE Messtechnik GmbH - Ludwig-Krohne-Str. 5 - 47058 Duisburg (Germany)

<b>1</b>	<b>Safety instructions</b>	<b>5</b>
<hr/>		
1.1	Intended use .....	5
1.2	Certifications .....	6
1.2.1	EC directive compliance .....	6
1.2.2	Ex approvals .....	6
1.3	Safety instructions from the manufacturer .....	7
1.3.1	Copyright and data protection .....	7
1.3.2	Disclaimer .....	7
1.3.3	Product liability and warranty .....	8
1.3.4	Information concerning the documentation .....	8
1.3.5	Warnings and symbols used .....	9
1.4	Safety instructions for the operator .....	9
<b>2</b>	<b>Device description</b>	<b>10</b>
<hr/>		
2.1	Scope of delivery .....	10
2.2	General description .....	10
2.3	Nameplate .....	11
2.3.1	In-head transmitter (Non-Ex) .....	11
2.3.2	In-head transmitter (Ex) .....	11
2.3.3	Rail-mount transmitter (Non-Ex) .....	12
2.3.4	Rail-mount transmitter (Ex) .....	13
<b>3</b>	<b>Installation</b>	<b>14</b>
<hr/>		
3.1	Notes on installation .....	14
3.2	In-head transmitter (Ex and Non-Ex) .....	14
3.3	Rail mounting kit for in-head transmitters .....	15
3.4	Rail-mount transmitter (Ex and Non-Ex) .....	18
<b>4</b>	<b>Electrical connections</b>	<b>19</b>
<hr/>		
4.1	Safety instructions .....	19
4.2	Electrical input connections .....	20
4.2.1	In-head transmitter (Ex and Non-Ex) .....	20
4.2.2	Rail-mount transmitter (Ex and Non-Ex) .....	21
4.3	Electrical connection diagrams .....	22
4.3.1	In-head transmitter (Non-Ex) .....	22
4.3.2	In-head transmitter (Ex) .....	23
4.3.3	Rail-mount transmitter (Non-Ex) .....	25
4.3.4	Rail-mount transmitter (Ex) .....	26
<b>5</b>	<b>Operation</b>	<b>27</b>
<hr/>		
5.1	Configuration with a PC .....	27
5.2	Factory settings for configuration .....	29
5.3	SmartSense function .....	30
5.4	Temperature difference measurement .....	30

5.5 Sensor break monitoring .....	30
<b>6 Service</b> .....	<b>31</b>
<hr/>	
6.1 Accessory parts .....	31
6.2 Spare parts availability .....	31
6.3 Availability of services .....	31
6.4 Returning the device to the manufacturer .....	31
6.4.1 General information .....	31
6.4.2 Form (for copying) to accompany a returned device .....	33
6.5 Disposal .....	33
<b>7 Technical data</b> .....	<b>34</b>
<hr/>	
7.1 Measuring principles .....	34
7.1.1 Resistance thermometer .....	34
7.1.2 Thermocouples .....	35
7.2 Technical data .....	36
7.3 Dimensions .....	41
7.4 Temperature data for potentially explosive areas .....	42
7.5 Output load diagram .....	43
7.6 Electrical data for outputs and inputs of the Ex versions .....	45
7.7 RTD and T/C accuracy table .....	46

## 1.1 Intended use

**DANGER!**

*You may only use transmitters labelled with the "Ex" symbol in potentially explosive areas or connect them to a sensor located in those areas. Additionally always note the zone(s) for which the devices have an approval. Otherwise the transmitters might cause an explosion that can result in fatal injuries.*

**DANGER!**

*Responsibility for the correct use of the devices with special regard to suitability, intended use and the field of application lies solely with the operator. To avoid any kind of incorrect use, also note the information in the chapter "Device description".*

**DANGER!**

*The transmitters do not contain any serviceable parts inside. Any substitution of components may impair the intrinsic safety of the versions with an Ex approval. Always send defective devices to the manufacturer or the local distributor for repair or exchange. If this is the case, attach a clear description of the malfunction for warranty claims.*

**INFORMATION!**

*The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose. To avoid any kind of incorrect use, also note the information in the chapter "Device description"!*

The manufacturer has constructed these transmitters for usage in an industrial environment and for the following measurements:

- Temperature measurements with resistance thermometers
- Temperature measurements with thermocouples
- Temperature difference measurements with resistance thermometers
- Voltage measurements in a range up to 500 mV
- Measurements with potentiometers

## 1.2 Certifications

### 1.2.1 EC directive compliance

CE marking



The device fulfils all applicable statutory requirements of the following EC directives:

- EMC Directive 2004/108/EC, harmonized standard EN 61326-1:2006
- Devices for use in hazardous areas: ATEX Directive 94/9/EC, harmonized standards EN 60079-0:2006, EN 60079-11:2007 and EN 60079-26:2007
- CE Directive 93/68/EEC

The manufacturer certifies successful testing of the product by applying the CE marking.

### 1.2.2 Ex approvals

#### TT 30 C Ex

ATEX	II 1 G Ex ia IIC T4/T5/T6 T4: +85°C / +185°F, T5: +65°C / +149°F, T6: +50°C / +122°F	DEMKO 06 ATEX 141332X
------	---	-----------------------

#### TT 30 R Ex

ATEX	II (1)G [Ex ia] IIC	DEMKO 06 ATEX 141333X
------	---------------------	-----------------------

#### PC connection cable (PC cable)

ATEX	II (1)G [Ex ia] IIC	DEMKO 06 ATEX 141337X
------	---------------------	-----------------------



#### **INFORMATION!**

See also "Special conditions for safe use" in the ATEX certificates in the download area of the manufacturer's website.

## 1.3 Safety instructions from the manufacturer

### 1.3.1 Copyright and data protection

The contents of this document have been created with great care. Nevertheless, we provide no guarantee that the contents are correct, complete or up-to-date.

The contents and works in this document are subject to copyright. Contributions from third parties are identified as such. Reproduction, processing, dissemination and any type of use beyond what is permitted under copyright requires written authorisation from the respective author and/or the manufacturer.

The manufacturer tries always to observe the copyrights of others, and to draw on works created in-house or works in the public domain.

The collection of personal data (such as names, street addresses or e-mail addresses) in the manufacturer's documents is always on a voluntary basis whenever possible. Whenever feasible, it is always possible to make use of the offerings and services without providing any personal data.

We draw your attention to the fact that data transmission over the Internet (e.g. when communicating by e-mail) may involve gaps in security. It is not possible to protect such data completely against access by third parties.

We hereby expressly prohibit the use of the contact data published as part of our duty to publish an imprint for the purpose of sending us any advertising or informational materials that we have not expressly requested.

### 1.3.2 Disclaimer

The manufacturer will not be liable for any damage of any kind by using its product, including, but not limited to direct, indirect or incidental and consequential damages.

This disclaimer does not apply in case the manufacturer has acted on purpose or with gross negligence. In the event any applicable law does not allow such limitations on implied warranties or the exclusion of limitation of certain damages, you may, if such law applies to you, not be subject to some or all of the above disclaimer, exclusions or limitations.

Any product purchased from the manufacturer is warranted in accordance with the relevant product documentation and our Terms and Conditions of Sale.

The manufacturer reserves the right to alter the content of its documents, including this disclaimer in any way, at any time, for any reason, without prior notification, and will not be liable in any way for possible consequences of such changes.

### **1.3.3 Product liability and warranty**

The operator shall bear responsibility for the suitability of the device for the specific purpose. The manufacturer accepts no liability for the consequences of misuse by the operator. Improper installation and operation of the devices (systems) will cause the warranty to be void. The respective "Standard Terms and Conditions" which form the basis for the sales contract shall also apply.

### **1.3.4 Information concerning the documentation**

To prevent any injury to the user or damage to the device it is essential that you read the information in this document and observe applicable national standards, safety requirements and accident prevention regulations.

If this document is not in your native language and if you have any problems understanding the text, we advise you to contact your local office for assistance. The manufacturer can not accept responsibility for any damage or injury caused by misunderstanding of the information in this document.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device. Special considerations and precautions are also described in the document, which appear in the form of underneath icons.



### 1.3.5 Warnings and symbols used

Safety warnings are indicated by the following symbols.



**DANGER!**

*This information refers to the immediate danger when working with electricity.*



**DANGER!**

*This warning refers to the immediate danger of burns caused by heat or hot surfaces.*



**DANGER!**

*This warning refers to the immediate danger when using this device in a hazardous atmosphere.*



**DANGER!**

*These warnings must be observed without fail. Even partial disregard of this warning can lead to serious health problems and even death. There is also the risk of seriously damaging the device or parts of the operator's plant.*



**WARNING!**

*Disregarding this safety warning, even if only in part, poses the risk of serious health problems. There is also the risk of damaging the device or parts of the operator's plant.*



**CAUTION!**

*Disregarding these instructions can result in damage to the device or to parts of the operator's plant.*



**INFORMATION!**

*These instructions contain important information for the handling of the device.*



**LEGAL NOTICE!**

*This note contains information on statutory directives and standards.*



• **HANDLING**

This symbol designates all instructions for actions to be carried out by the operator in the specified sequence.

➡ **RESULT**

This symbol refers to all important consequences of the previous actions.

## 1.4 Safety instructions for the operator



**WARNING!**

*In general, devices from the manufacturer may only be installed, commissioned, operated and maintained by properly trained and authorized personnel.  
This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device.*

## 2.1 Scope of delivery

The scope of delivery always consists of the transmitter and its documentation.

## 2.2 General description

### TT 30 C

The TT 30 C is an intelligent, digital 2-wire universal in-head transmitter for temperature measurements and other measurement applications in an industrial environment. For further information about the possible measurements refer to *Intended use* on page 5.

The in-head transmitter is optionally available in an intrinsically safe version for installation in potentially explosive areas. These devices wear the "Ex" symbol and have an approval for mounting into classified hazardous area, Zone 0, 1 and 2.

All in-head versions are intended for installation in a "B connection head" or larger according to DIN 43729. As an alternative you can also mount the in-head version on a rail according to DIN EN 50022 with the help of the rail installation kit (for further information refer to *Rail mounting kit for in-head transmitters* on page 15). In this way you may operate an in-head transmitter with an Ex approval with sensors in potentially explosive areas, if the transmitter is installed in the safe area (though this case is very uncommon).

### TT 30 R

The TT 30 R is an intelligent, digital 2-wire universal rail-mount transmitter with the same features as the in-head version.

The rail-mount transmitter is optionally available in an intrinsically safe version for installation into safe area with the input (for sensors) connected to potentially explosive areas. All devices with an Ex approval wear the "Ex" symbol.

The rail-mount transmitter is intended for installation on a rail according to DIN 50022.

### PC configuration

You can configure the devices with the help of a PC and the software "OPTITEMP TempSoft". The current version of the software is available in the download area of the manufacturer's website. After PC configuration no further calibration is required.

## 2.3 Nameplate



### **INFORMATION!**

Look at the device nameplate to ensure that the device is delivered according to your order.

The transmitter can be identified by the information on the nameplates.

### 2.3.1 In-head transmitter (Non-Ex)

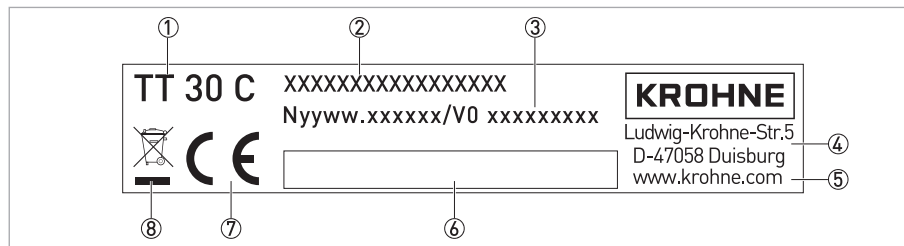


Figure 2-1: Nameplate of in-head transmitter (Non-Ex)

- ① Product name
- ② Part number
- ③ Year and week of manufacturing / batch number
- ④ Manufacturer and address
- ⑤ Website of manufacturer
- ⑥ Space for configuration data sticker
- ⑦ CE marking (EC conformity)
- ⑧ WEEE dustbin symbol

### 2.3.2 In-head transmitter (Ex)

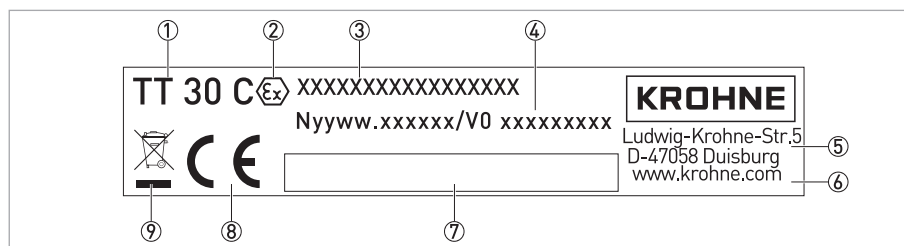


Figure 2-2: Nameplate 1 of in-head transmitter (Ex)

- ① Product name
- ② Symbol for Ex-approval
- ③ Part number
- ④ Year and week of manufacturing / batch number
- ⑤ Manufacturer and address
- ⑥ Website of manufacturer
- ⑦ Space for configuration data sticker
- ⑧ CE marking (EC conformity)
- ⑨ WEEE dustbin symbol

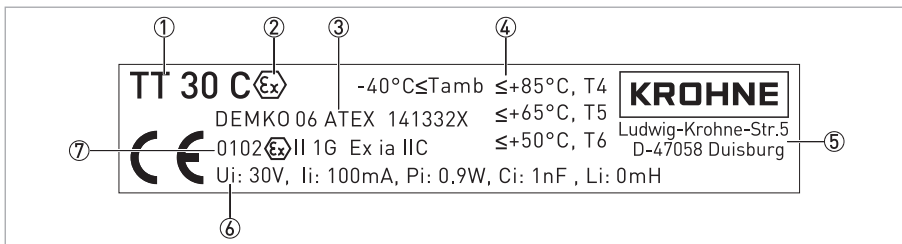


Figure 2-3: Nameplate 2 of in-head transmitter (Ex)

- ① Product name
- ② Symbol for Ex-approval
- ③ ATEX approval
- ④ Temperature classes
- ⑤ Manufacturer and address
- ⑥ Ex-relevant electrical data
- ⑦ Supplementary Ex-data

### 2.3.3 Rail-mount transmitter (Non-Ex)

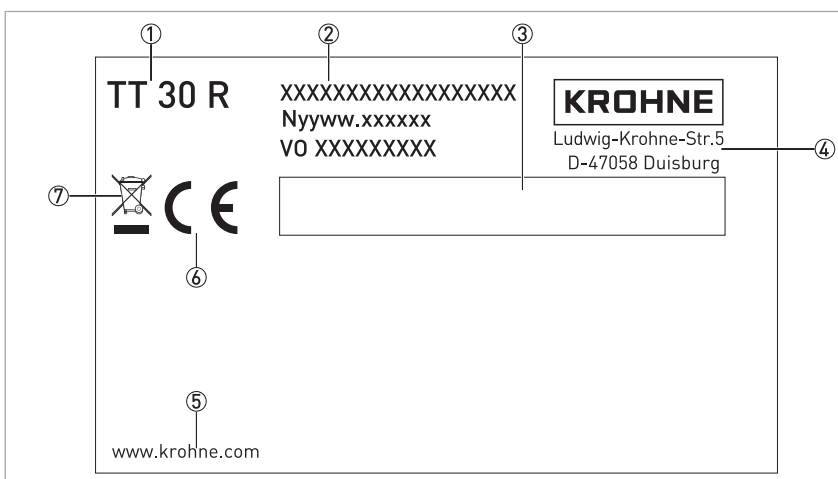


Figure 2-4: Nameplate of rail-mount transmitter (Non-Ex)

- ① Product name
- ② Top down: part number, year and week of manufacturing, batch number
- ③ Space for configuration data sticker
- ④ Manufacturer and address
- ⑤ Website of manufacturer
- ⑥ CE marking (EC conformity)
- ⑦ WEEE dustbin symbol

## 2.3.4 Rail-mount transmitter (Ex)

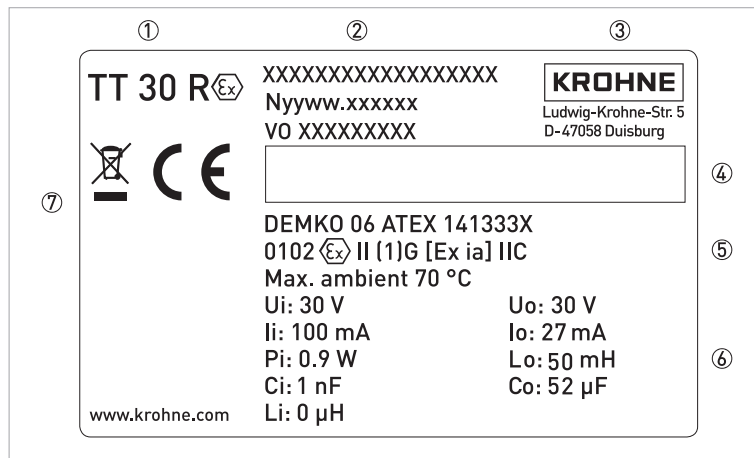


Figure 2-5: Nameplate of rail-mount transmitter (Ex)

- ① Product name and symbol for Ex-approval
- ② Top down: part number, year and week of manufacturing, batch number
- ③ Manufacturer and address
- ④ Space for configuration data sticker
- ⑤ Top down: ATEX approval, supplementary Ex-data, maximum ambient temperature
- ⑥ Ex-relevant electrical data
- ⑦ WEEE dustbin symbol

### 3.1 Notes on installation



**INFORMATION!**

*Inspect the cartons carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.*



**INFORMATION!**

*Do a check of the packing list to make sure that you have all the elements given in the order.*



**INFORMATION!**

*Look at the device nameplate to ensure that the device is delivered according to your order.*

### 3.2 In-head transmitter (Ex and Non-Ex)



**DANGER!**

*Never install or operate the Non-Ex version in potentially explosive areas, it might cause an explosion that can result in fatal injuries! Only use the Ex version in potentially explosive areas! Also note the following items which concern the Ex version:*

- *It must be installed in a housing that has the protection category IP20 or better according to DIN IEC 60529. Additionally the magnesium component of the housing must not exceed 6% as a higher magnesium component may increase the flammability and the Ex capability.*
- *If it is mounted in a housing which is isolated from the ground and can be charged to an ignition capable level, then the housing must be electrostatically grounded when installed in hazardous areas.*
- *It is approved for potentially explosive areas in zone 0, 1 and 2.*
- *It must be supplied by an intrinsically safe power supply unit or a Zener barrier placed outside of the potentially explosive area.*



**CAUTION!**

*The manufacturer has developed the Non-Ex version for an operating temperature range of -40...+85°C / -40...+185°F (the Ex version has the same ambient temperature range). To avoid destruction or damage of the device, always assure that the operating temperature or the ambient temperature does not exceed the permissible range and note the following items:*

- *If you operate the Ex version in potentially explosive areas, the ambient temperature also depends on the temperature class. For detailed information refer to the section about the temperature data for potentially explosive areas on page 42.*
- *The thermowell also transfers the process temperature to the transmitter housing. If the process temperature is close to or exceeds the maximum temperature of the transmitter, then the temperature in the transmitter housing can rise above the maximum permissible temperature!*

One way to decrease the heat transfer via the thermowell is to install the transmitter farther away from the heat source. An alternative is to make the thermowell longer. Inversely you can take similar measures if the temperature is below the specified minimum temperature.

The in-head transmitters (Ex and Non-Ex version) are intended for installation in DIN B connection heads or larger. The large  $\varnothing 7$  mm / 0.28" center hole facilitates the electrical connection of the measurement sensor and the installation (for detailed information refer to the chapter "Dimensions and weights"). The following drawing shows the installation of the in-head transmitter with the help of the connection head installation kit:



**INFORMATION!**

*The connection head installation kit does not belong to the standard scope of delivery of the transmitter, you have to order it separately. For more information refer to Accessory parts on page 31.*

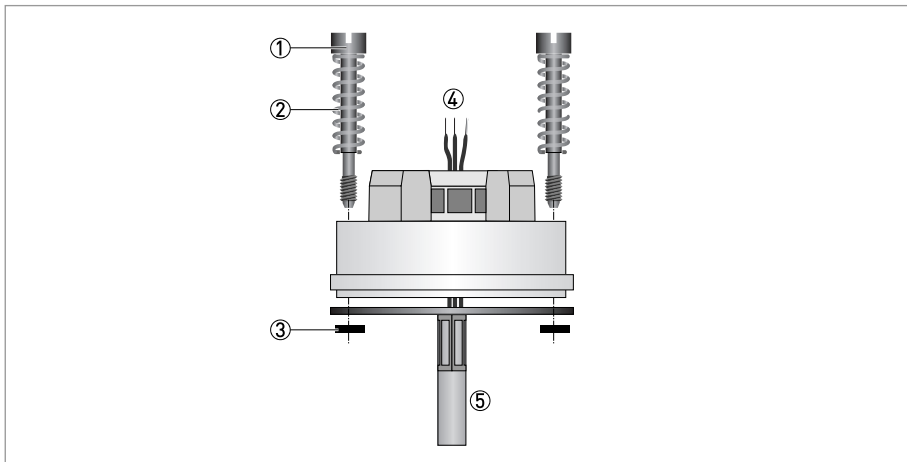


Figure 3-1: Connection head installation kit

- ① M4 screw
- ② Spring
- ③ Lock washer
- ④ Wires of measuring insert
- ⑤ Sheath

### 3.3 Rail mounting kit for in-head transmitters



**DANGER!**


*To avoid fatal injuries, destruction or damage of the transmitter, always note the relevant admonitions in the previous section if you install the in-head-transmitter on a rail!*



**INFORMATION!**

*The rail mounting kit allows to install the in-head transmitter on a rail according to DIN 50022. The kit does not belong to the standard scope of delivery, you have to order it separately. For more information refer to the section about the accessory parts in the chapter "Service".*


## Rail mounting kit for in-head transmitters

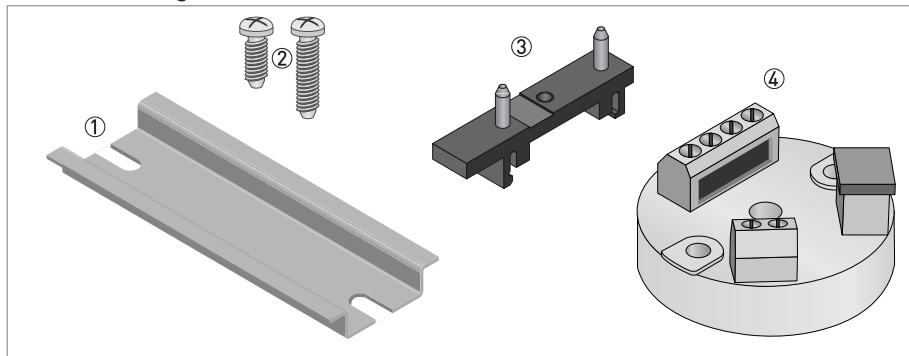

- ① Rail (not included in the kit)
- ② Screws
- ③ Clamp
- ④ Transmitter (not included in the kit)




## Step 1

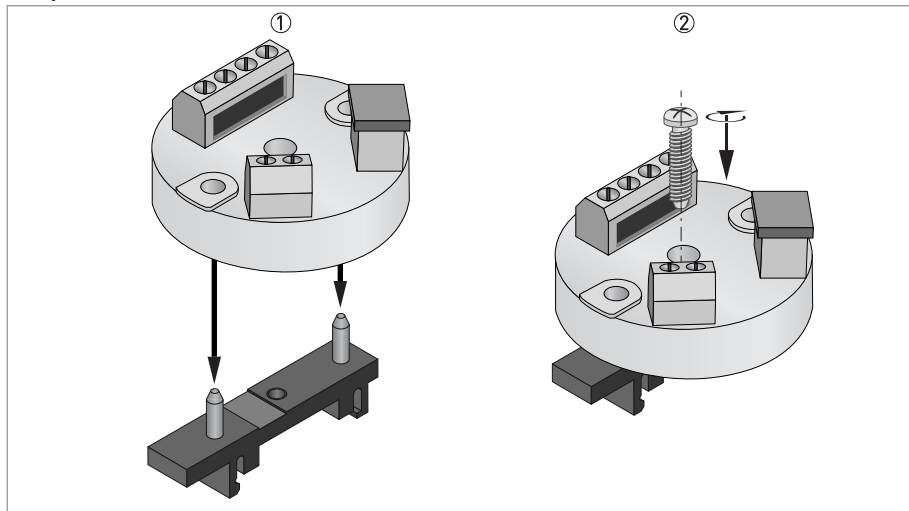

- ① Place the transmitter on the clamp as shown above.
- ② Push the transmitter down until it reaches the plate and secure with a screw.

## Step 2

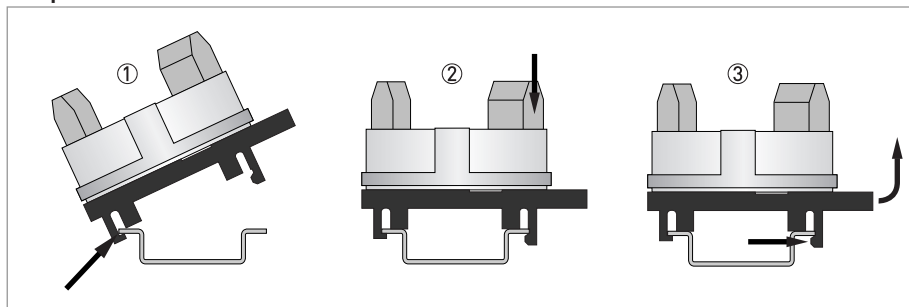

- ① Hook one end of the clamp into the rail as shown above.
- ② Push the other end of the the kit down until it snaps onto the rail.
- ③ Release by pushing the hook, shown in the picture, and at the same time lift the clip out of the rail.

### 3.4 Rail-mount transmitter (Ex and Non-Ex)



**DANGER!**

Never install or operate the Non-Ex version in potentially explosive areas, it might cause an explosion that can result in fatal injuries! The rail-mounted transmitter TT 30 R Ex must NOT be mounted in potentially hazardous area BUT might be connected to classified hazardous location! Also note the following items which concern the Ex version:

- It is approved for mounting into safe, non-hazardous area with the input connected to potentially explosive area, zone 0, 1 and 2.
- It must be supplied by an intrinsically safe power supply unit or a Zener barrier placed outside of the potentially explosive area.



**CAUTION!**

The manufacturer has developed the Non-Ex version for an operating temperature range of  $-20...+70^{\circ}\text{C}$  /  $-4...+158^{\circ}\text{F}$  (the Ex version has the same ambient temperature range). To avoid destruction or damage of the device, always note the following items:

- Assure that the operating temperature or the ambient temperature does not exceed the permissible range.



**INFORMATION!**

The rail-mount transmitter is intended for installation on a rail according to DIN 50022.

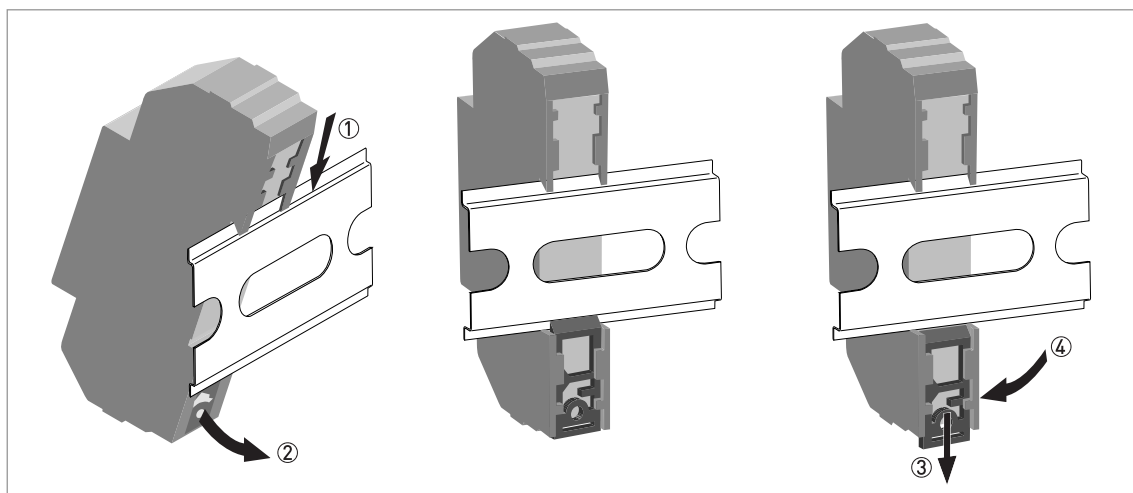


Figure 3-2: Installation of the rail-mount version



- ① Hook the upper groove of the transmitter onto the rail.
- ② Press the lower part of the transmitter against the rail.
- ➡ When you hear a "click" from the snap fastener, the transmitter is fixed onto the rail (drawing in the centre).
- ③ To remove the transmitter, use a small screwdriver to push the snap fastener downwards.
- ④ Carefully move the lower part of the transmitter in the forward direction and then upwards.

## 4.1 Safety instructions

**DANGER!**

All work on the electrical connections may only be carried out with the power disconnected.

**DANGER!**

Observe the national regulations for electrical installations!

**CAUTION!**

Before you connect and operate a transmitter, always note the following items to avoid an electric shock:

- For all work on the electrical connections use an electrostatic safe (i.e. grounded) workplace! In this way you minimize the risk of electrostatic discharge (ESD).
- Assure that the all removable covers were closed after any work on the device to protect it from dirt.
- Maximum common-mode voltage on the input is restricted to 50 VAC / 75 VDC.

**DANGER!**

Never connect or operate a non-Ex version of a transmitter in potentially explosive areas, otherwise it might cause an explosion that can result in fatal injuries! Before you connect and operate a transmitter version with an Ex approval, always note the following items to avoid an explosion which may result in fatal injuries:

- Connect the Ex version only to Ex approved sensors or sensors that meet the requirements for "simple apparatus" in EN 60079-11:2007, section 5.7.
- Observe the corresponding regulations, the declaration of conformity, the type test certificate of the device and the relevant instructions of this document.

**WARNING!**

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

**INFORMATION!**

Look at the device nameplate to ensure that the device is delivered according to your order.

**INFORMATION!**

The transmitter is protected against polarity reversal. No damage will occur to the device if the polarity of the supply voltage is switched. The output will then indicate 0 mA.

## 4.2 Electrical input connections



**CAUTION!**

Always establish the electrical connections according to the following diagrams. Otherwise it can come to destruction or damage of the transmitter.



**INFORMATION!**

To avoid measuring errors, assure that all cables are connected properly and that the screws are tightened correctly.

### 4.2.1 In-head transmitter (Ex and Non-Ex)



**DANGER!**

"Isolation input/output/PC" as shown in section "Technical data" on page 36 only shows the signal isolation. This is not an intrinsically safe galvanic isolation, which can be interpreted as an isolating barrier. Therefore particular care should be applied when selecting the barriers for the TT 30 C Ex.

#### Electrical input connections of the in-head transmitter

<p>Pt100...1000, Ni100, Ni1000, 4-wire connection</p>	<p>Pt100...1000, Ni100, Ni1000, 3-wire connection</p>
<p>Pt100 "SmartSense", 3-wire connection ③</p>	<p>Pt100, temperature difference, <math>T_1 &gt; T_2</math> ④</p>
<p>Potentiometer, 4-wire connection</p>	<p>Potentiometer, 3-wire connection</p>

Thermocouple	Voltage

- ① SmartSense wire
- ② Maximum input
- ③ Not for rail-mount transmitter
- ④ Differential value > 5 Ω or select "Sensor break = None"

#### 4.2.2 Rail-mount transmitter (Ex and Non-Ex)




##### **DANGER!**

"Isolation input/output/PC" as shown in section "Technical data" on page 36 only shows the signal isolation. This is not an intrinsically safe galvanic isolation, which can be interpreted as an isolating barrier. Therefore particular care should be applied when selecting the barriers for the TT 30 R Ex.

##### Electrical input connections of the rail-mount transmitter

<b>Pt100...1000, Ni100, Ni1000, 4-wire connection</b>	<b>Pt100...1000, Ni100, Ni1000, 3-wire connection</b>
<b>Pt100, temperature difference, <math>T_1 &gt; T_2</math> ②</b>	<b>Potentiometer, 4-wire connection</b>
<b>Potentiometer, 3-wire connection</b>	<b>Thermocouple</b>

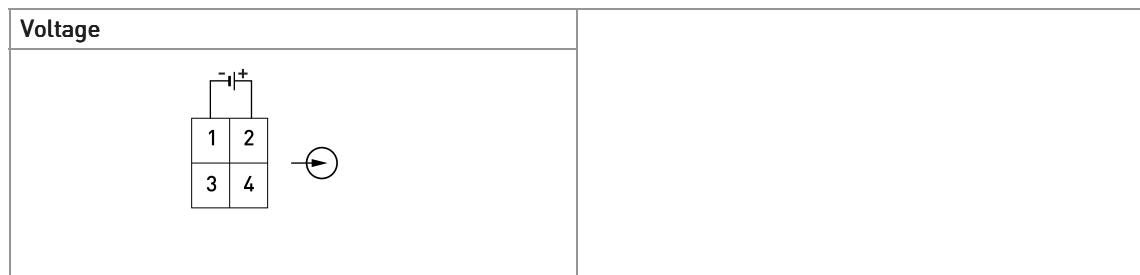

- ① Maximum input
- ② Differential value > 5  $\Omega$  or select "Sensor break = None"

### 4.3 Electrical connection diagrams



**CAUTION!**

Always establish the electrical connections according to the following diagrams. Otherwise it can come to destruction or damage of the transmitter.

#### 4.3.1 In-head transmitter (Non-Ex)



**DANGER!**

Neither operate this transmitter in potentially explosive areas, nor connect it to a sensor located in a potentially explosive area! Otherwise the transmitter might cause an explosion that can result in fatal injuries!



**CAUTION!**

Note that the maximum output load always depends on the power supply. If the maximum output load is exceeded, then the measured value will become incorrect. For further information refer to the output load diagrams in the chapter "Technical data".



**INFORMATION!**

The transmitter has a polarity protection. Connecting the power supply with a wrong polarity will not damage the transmitter.

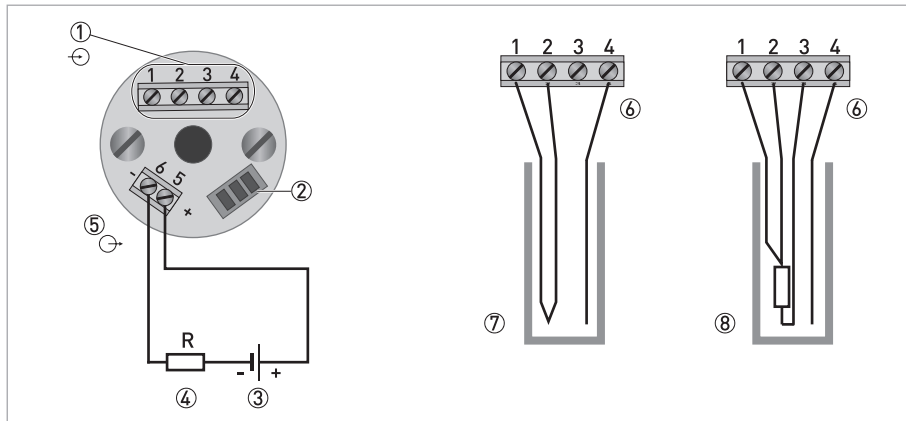


Figure 4-1: Connection diagram of the in-head transmitter (Non-Ex)

- ① Input
- ② Terminal for PC connection cable (contained in configuration set)
- ③ Power supply (6.5...36 VDC)
- ④ Load resistance
- ⑤ Output signal (4...20 mA)
- ⑥ SmartSense temperature sensor
- ⑦ Thermocouple
- ⑧ Pt100, 3-wire connection

### 4.3.2 In-head transmitter (Ex)



#### **DANGER!**

The Ex transmitter can be installed in potentially explosive areas of zone 0, 1 and 2. It may only be connected to Ex approved sensors or sensors that meet the requirements for "simple equipment" in EN 60079-11:2007, section 5.7. During operations in potentially explosive areas always note the relevant safety instructions and especially the following items:

- The transmitter must be supplied by an intrinsically safe power supply unit or Zener barrier placed outside of the potentially explosive area.
- The output parameters of the Ex approved Zener barrier or voltage supply have to be less or equal than the input parameters of the transmitter (i.e.  $U_i$ ,  $I_i$ ,  $P_i$ ,  $L_i$ ,  $C_i$ ).



#### **CAUTION!**

Note that the maximum output load always depends on the power supply. If the maximum output load is exceeded, then the measured value will become incorrect. For further information refer to the output load diagrams in the chapter "Technical data".



#### **INFORMATION!**

The transmitter has a polarity protection. Connecting the power supply with a wrong polarity will not damage the transmitter.

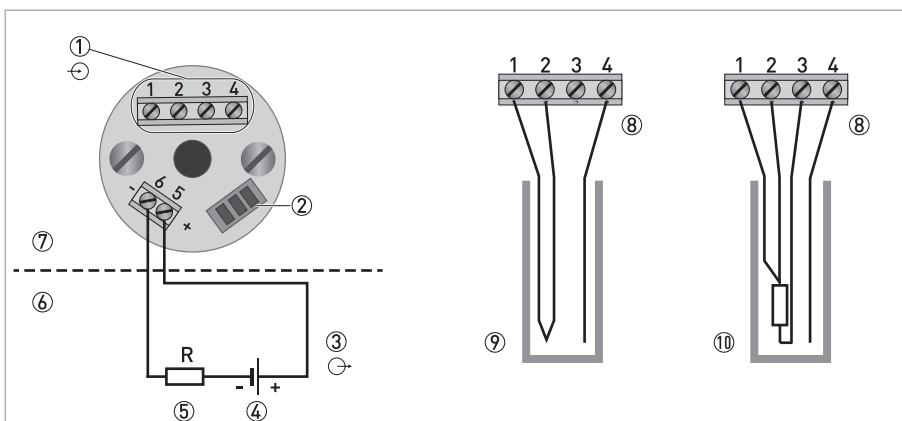


Figure 4-2: Connection diagram of the in-head transmitter (Ex)

- ① Input
- ② Terminal for PC connection cable (contained in configuration set)
- ③ Output signal (4...20 mA)
- ④ Intrinsically safe power supply (8...30 VDC)
- ⑤ Load resistance
- ⑥ Safe area
- ⑦ Potentially explosive area
- ⑧ SmartSense temperature sensor
- ⑨ Thermocouple
- ⑩ Pt100, 3-wire connection



## 4.3.3 Rail-mount transmitter (Non-Ex)

**DANGER!**

Neither operate this transmitter in potentially explosive areas, nor connect it to a sensor located in a potentially explosive area! Otherwise the transmitter might cause an explosion that can result in fatal injuries!

**CAUTION!**

Note that the maximum output load always depends on the power supply. If the maximum output load is exceeded, then the measured value will become incorrect. For further information refer to the output load diagrams in the chapter "Technical data".

**INFORMATION!**

The transmitter has a polarity protection. Connecting the power supply with a wrong polarity will not damage the transmitter.

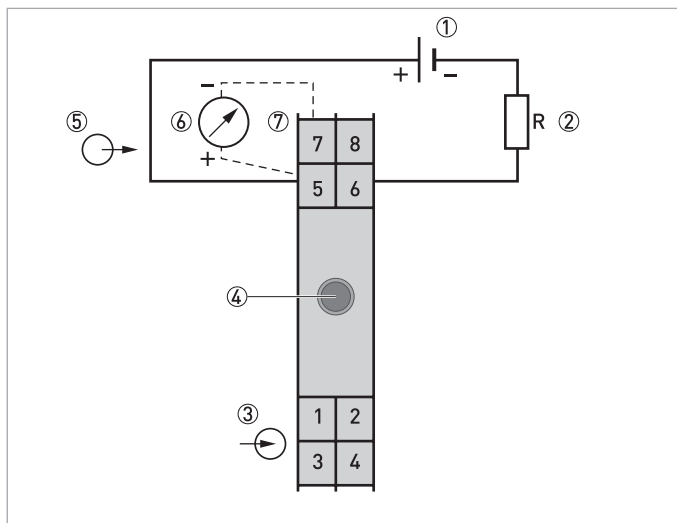


Figure 4-3: Connection diagram of the rail-mount transmitter (Non-Ex)

- ① Power supply (7.5...36 VDC)
- ② Load resistance
- ③ Input
- ④ Female connector for PC connection cable (contained in configuration set)
- ⑤ Output signal (4...20 mA)
- ⑥ Measuring device ( $R_I \leq 10 \Omega$ )
- ⑦ Test circuit (mA)

## 4.3.4 Rail-mount transmitter (Ex)

**DANGER!**

The Ex transmitter can be connected to temperature sensors installed in potentially explosive areas of zone 0, 1 and 2. It may only be connected to Ex approved sensors or sensors that meet the requirements for "simple equipment" in EN 60079-11:2007, section 5.7. During operations with the input signal connected to potentially explosive areas always note the relevant safety instructions and especially the following items:

- The transmitter must be supplied by an intrinsically safe power supply unit or Zener barrier placed outside of the potentially explosive area.
- The output parameters of the Ex approved Zener barrier or voltage supply have to be less or equal than the input parameters of the transmitter (i.e.  $U_i$ ,  $I_i$ ,  $P_i$ ,  $L_i$ ,  $C_i$ ).

**CAUTION!**

Note that the maximum output load always depends on the power supply. If the maximum output load is exceeded, then the measured value will become incorrect. For further information refer to the output load diagrams in the chapter "Technical data".

**INFORMATION!**

The transmitter has a polarity protection. Connecting the power supply with a wrong polarity will not damage the transmitter.

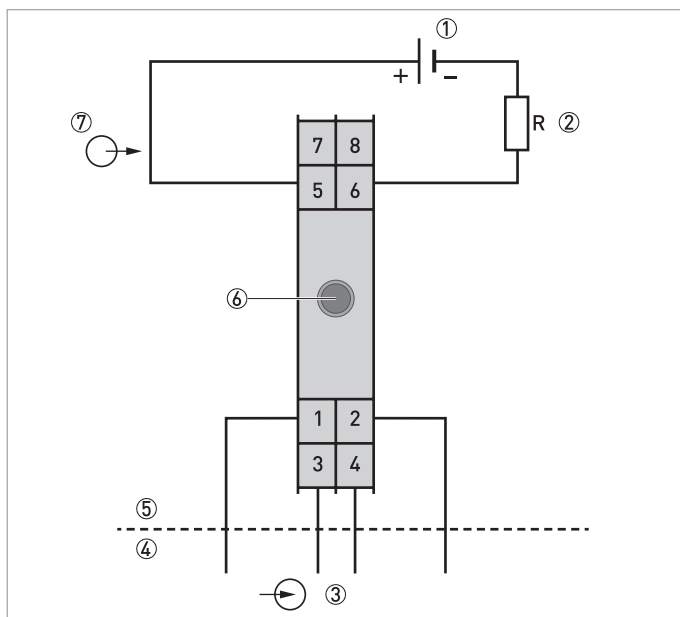


Figure 4-4: Connection diagram of the rail-mount transmitter (Ex)

- ① Intrinsically safe power supply (8...30 VDC)
- ② Load resistance
- ③ Input
- ④ Potentially explosive area
- ⑤ Safe area
- ⑥ Female connector for PC connection cable (contained in configuration set)
- ⑦ Output signal (4...20 mA)

## 5.1 Configuration with a PC

**DANGER!**

*Never establish a connection between a PC and a transmitter if one of them is within a potentially explosive area. Otherwise the PC or the transmitter might cause an explosion that can result in fatal injuries. If you want to configure the transmitter with the help of a PC, assure that both of them are not in a potentially explosive area.*

**DANGER!**

*If you want to configure a transmitter with an Ex approval with the help of a PC, always use an ATEX certified cable. Never configure the transmitter when in hazardous area or when connected to a sensor located in hazardous area.*

**CAUTION!**

*Only use the manufacturer's configuration kit for PC configuration. Another configuration kit could destroy or damage the transmitter.*

**DANGER!**

*Always put the cover on the transmitter programming connector when not used. If the transmitter is not properly installed, the programming connector can get energized and cause electrical shock.*


The configuration of the transmitters works with a PC and the manufacturer's PC configuration kit (for further information refer to *Accessory parts* on page 31). If wether the PC nor the transmitter (including its sensor) is within a potentially explosive area, you can carry out the configuration "online" (i.e. the transmitter can remain in operation during the configuration and you have access to all functions). During configuration, the output is "frozen" and the transmitter continues to work with the last value. As soon as the configuration has been completed, the transmitter uses the new parameters.

If you want to configure the transmitter with a PC, the following conditions have to be fulfilled:

- The transmitter must be connected to a power supply. For further information refer to the chapter "Electrical connection".
- The software "TempSoft" has to be installed on your PC. For further information refer to the manual "TempSoft". The current version of the software and the manual "TempSoft" are available in the download area on the manufacturer's website.
- You have available the manufacturer's PC configuration kit which contains a configuration cable and an adapter cable.
- Maximum common-mode voltage on the input is restricted to 50 VAC / 75 VDC.


To configure the in-head version (Ex and Non-Ex) you just need the configuration cable with the adapter cable; to configure the rail-mount version, you only need the configuration cable. For further information refer to the following illustrations:

## PC connection of the in-head version

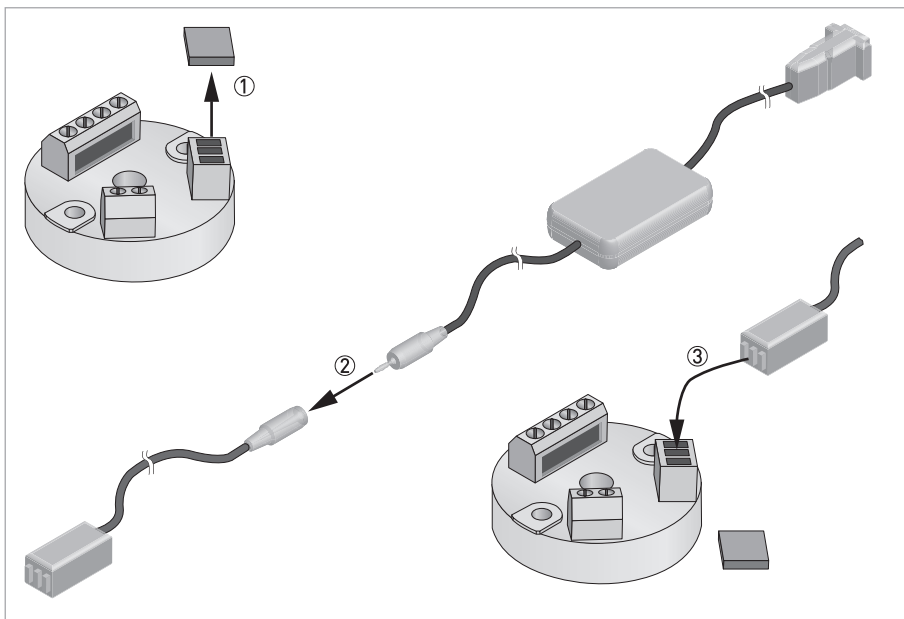

- Start your PC and the software "TempSoft".
  - Remove the cover from the terminal for the adapter cable (①).
  - Connect the adapter cable with the PC configuration cable (②).
  - Plug the connector of the adapter cable into the correct terminal (③).
  - Plug the connector into the interface of the PC.
- ➡ The cable connection has been established, you can start the PC configuration of the transmitter now.
- After configuration plug the cover on the terminal for the adapter cable again to prevent the terminal from dirt.

## PC connection of the rail-mount version

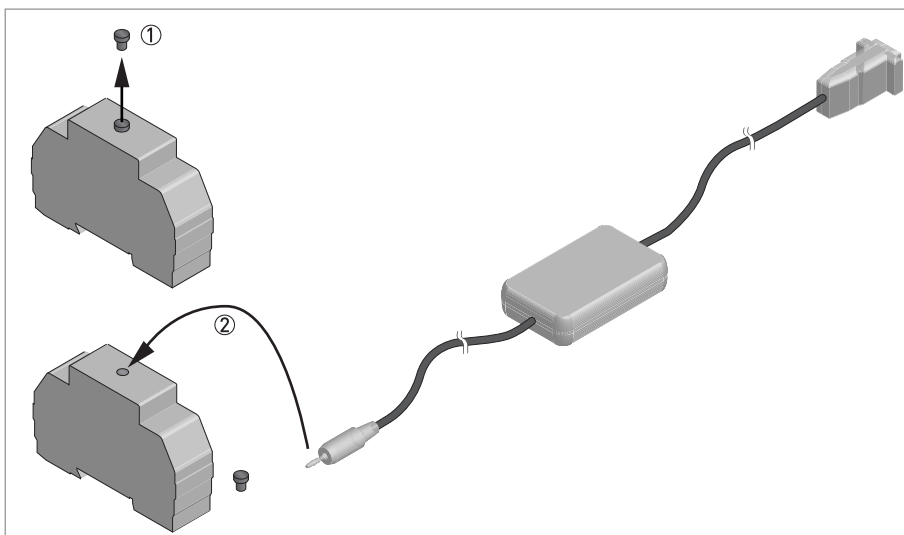

- Start your PC and the software "TempSoft".
- Remove the plug from the female connector for the PC connection cable (①).
- Plug the male connector of the PC configuration cable into the female connector of the transmitter (②).

- Plug the connector into the interface of the PC.
- ➡ The cable connection has been established, you can start the PC configuration of the transmitter now.
- After configuration plug the cover into the female connector again to prevent the connector from dirt.

**INFORMATION!**

*After a successful PC configuration the transmitter is ready for operation, a calibration is not required.*

## 5.2 Factory settings for configuration

The transmitters are delivered either with the following factory settings or configured according to customers' specifications:

Transmitter	Input	Output	Sensor break
In-head version (Non-Ex)	Pt100, 3-wire connection, 0...+600°C / +32...+1112°F	4...20 mA	On
In-head version (Ex)	Pt100, 4-wire connection, 0...+100°C / +32...+212°F		
Rail-mount version (Non-Ex)	Pt100, 3-wire connection, 0...+600°C / +32...+1112°F		
Rail-mount version (Ex)			

### 5.3 SmartSense function

The in-head transmitter uses the measuring sensors (needs one additional wire in sensor) to monitor permanently the isolation resistance of the sensor and of the sensor leads. This function is called "SmartSense" and it is possible in combination with a sensor of the type Pt100 (3-wire connection) and with thermoelements. The "SmartSense" function is important because an isolation resistance which is too low creates an incorrect measuring value and thus a faulty output.

If the transmitter shows a low isolation resistance, the "SmartSense" function allows to set the output to a predefined value. You can set the function with the help of the PC configuration software, in the Input tab, select:

Connection: 3w+Low Isolation for Pt100 or Cold Junction Comp.: Yes+Low Isolation for thermocouple.

### 5.4 Temperature difference measurement

The transmitters are able to measure the temperature difference between two 2-wire connected Pt100 sensors, T1 – T2. T1 must always be equal or greater than T2. Select this function in the connection window of the input folder.

For temperature difference measurements you have to deactivate the sensor break function, i.e. it must have the setting "Sensor break = None". You can set the function with the help of the PC configuration, for further information refer to *Configuration with a PC* on page 27.

### 5.5 Sensor break monitoring

The transmitter is able to determine a sensor break/short circuit with the help of a pulse signal. This signal may interfere with electronic temperature calibrators. To switch off the pulse signal, you have to choose the setting "Sensor break = None". You can set the function with the help of the PC configuration, for further information refer to *Configuration with a PC* on page 27.

## 6.1 Accessory parts

Accessory part	Order code
Connection head installation kit for in-head version	70ADA00012
Rail mounting kit for in-head version	70ADA00027
Configuration kit including modem, software Consoft and cables for USB connection (non ATEX version)	4001107901
Complete PC configuration kit (inclusive ATEX cable and adapter cable for the configuration of the in-head version)	70CFG00092
Separate ATEX cable for PC configuration	70IPRX0002
Separate adapter cable for the configuration of the in-head version	70IPRX0003

## 6.2 Spare parts availability

The manufacturer adheres to the basic principle that functionally adequate spare parts for each device or each important accessory part will be kept available for a period of 3 years after delivery of the last production run for the device.

This regulation only applies to spare parts which are subject to wear and tear under normal operating conditions.

## 6.3 Availability of services

The manufacturer offers a range of services to support the customer after expiration of the warranty. These include repair, maintenance, technical support and training.



### **INFORMATION!**

*For more precise information, please contact your local sales office.*

## 6.4 Returning the device to the manufacturer

### 6.4.1 General information

This device has been carefully manufactured and tested. If installed and operated in accordance with these operating instructions, it will rarely present any problems.



### **CAUTION!**

*Should you nevertheless need to return a device for inspection or repair, please pay strict attention to the following points:*

- *Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.*
- *This means that the manufacturer can only service this device if it is accompanied by the following certificate (see next section) confirming that the device is safe to handle.*

**CAUTION!**

*If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:*

- *to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,*
- *to enclose a certificate with the device confirming that is safe to handle and stating the product used.*



### 6.4.2 Form (for copying) to accompany a returned device

Company:		Address:	
Department:		Name:	
Tel. no.:		Fax no.:	
Manufacturer's order no. or serial no.:			
The device has been operated with the following medium:			
This medium is:	water-hazardous		
	toxic		
	caustic		
	flammable		
	We checked that all cavities in the device are free from such substances.		
	We have flushed out and neutralized all cavities in the device.		
We hereby confirm that there is no risk to persons or the environment through any residual media contained in the device when it is returned.			
Date:		Signature:	
Stamp:			

### 6.5 Disposal



**CAUTION!**

*Disposal must be carried out in accordance with legislation applicable in your country.*

## 7.1 Measuring principles

The kind of the measuring principle depends on the measuring insert that you combine with the transmitter. In matters of the thermometer type the manufacturer offers two different measuring inserts, either with a resistance thermometer or with a thermocouple. For more information refer to the handbook of the measuring inserts or the handbook of the industrial thermometers.

### 7.1.1 Resistance thermometer

The measuring insert with a resistance thermometer features a temperature-sensitive sensor made from a platinum RTD, whose value at 0°C / +32°F is 100 Ω. That is where the name "Pt100" comes from.

It is generally valid that the electric resistance of metals increases according to a mathematical function as the temperature rises. This effect is taken advantage of by resistance thermometers to measure temperature. The "Pt100" thermometer features a measuring resistance with defined characteristics, standardised in IEC 60751. The same is true for the tolerances. The average temperature coefficient of a Pt100 is  $3.85 \times 10^{-3} \text{ K}^{-1}$  in the range from 0...+100°C / +32...+212°F.

During operation, a constant current  $I (\leq 1 \text{ mA})$  flows through the Pt100 RTD, which brings about a voltage drop  $U$ . The resistance  $R$  is calculated using Ohm's Law ( $R=U/I$ ). As the voltage drop  $U$  at 0°C / +32°F is 100 mV, the resulting resistance of the Pt100 thermometer is 100 Ω (100 mV / 1 mA = 100 Ω).

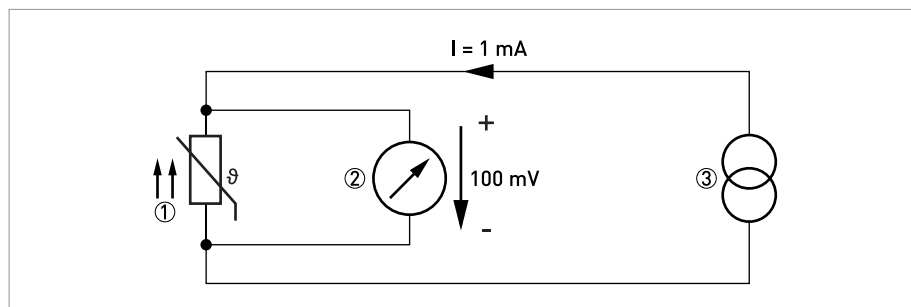


Figure 7-1: Pt100 resistance thermometer in 4-wire connection at 0°C / +32°F, schematic.

- ① Pt100 RTD
- ② Voltage meter
- ③ Current source

## 7.1.2 Thermocouples

The thermocouple features two electric conductors made from different metals, connected at one end. Each free end is connected to a compensation cable which is then connected to a millivolt meter. This circuitry forms a "thermal circuit". The point at which the two electric conductors connect is called the measuring point and the point at which the compensation cables connect to the conductors of the millivolt meter is called the cold junction.

If the measuring point of this thermal circuit is heated up, a small electrical voltage (thermal voltage) can be measured. If, however, the measuring point and the cold junction are at the same temperature, no thermoelectric voltage is generated. The degree of thermoelectric voltage, also known as electromotive force (EMF), depends on the thermocouple material and the extent of the temperature difference between the measuring point and the cold junction. It can be measured using the millivolt meter with no auxiliary power.

Simply put, the thermocouple behaves like a battery, the voltage of which also increases as the temperature rises.



### INFORMATION!

*The characteristic curves and tolerances of commercially available thermocouples are standardised in IEC 60584.*

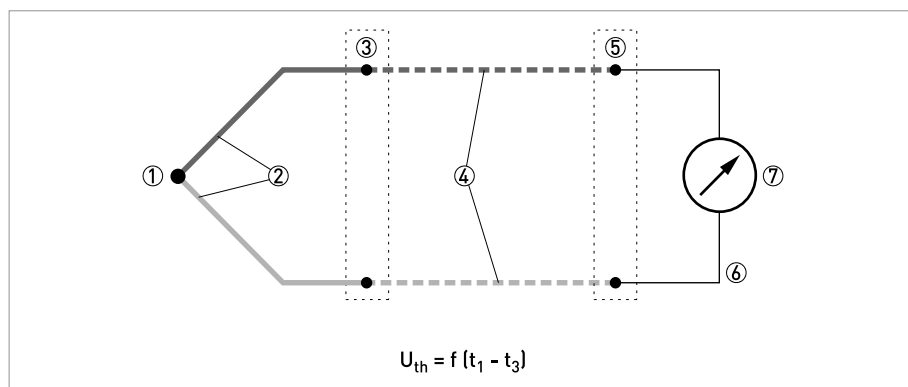


Figure 7-2: Thermocouple measuring circuit, schematic.

- ① Measuring point  $t_1$  (hot junction)
- ② Thermocouple
- ③ Transition junction  $t_2$
- ④ Compensation cable / extension cable
- ⑤ Reference junction  $t_3$  (cold junction)
- ⑥ Copper conductor
- ⑦ Voltage meter  $U_{th}$

## 7.2 Technical data



### INFORMATION!

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

### Measuring system

Application range	Temperature, resistance or voltage measurements of solids, liquids and gases in an industrial environment.
-------------------	--

### Design

Versions	
TT 30 C	In-head transmitter which is optionally available in an intrinsically safe version for installation in potentially explosive areas of zone 0, 1 and 2.
TT 30 R	Rail-mount transmitter which is optionally available in an intrinsically safe version for connection to sensors installed in potentially explosive areas of zone 0, 1 and 2.
Special features	
Sensor error correction	This function automatically corrects known sensor errors; the precondition is that you have entered these known sensor errors (e.g. the deviation of a calibrated sensor from the standard curve).
System error correction	This function corrects the system error (sensor error + transmitter error); the precondition is that the sensor has been exposed to one (one-point correction) or two (two-point correction) accurately measured temperatures ("true temperatures"); after you have entered these true temperature(s), the transmitter automatically corrects these errors afterwards.
Sensor isolation monitoring / SmartSense (only for TT 30 C)	This function continuously monitors the isolation resistance of thermocouples and 3-wire connected RTDs as well as the cabling between sensor and transmitter; if the isolation is too low, the transmitter forces the output to a user-defined level; note that SmartSense requires an extra lead inside the thermocouple or RTD. User-definable output: $\leq 3.6 \text{ mA}$ , $\geq 21 \text{ mA}$ or customized
Customized linearization	A customized linearization with 9 linearization points is available for the transmitter. It can be used to create almost any type of linearization curve for RTD, T/C, resistance and mV inputs (the curve must be monotonic increasing).
Sensor break monitoring	This function monitors sensor break and forces the output signal to a user-defined level if any sensor lead is broken or disconnected, for RTD input it will also detect sensor short circuit. The monitoring is furnished with a pulsed excitation current which eliminates the voltage drop on the lead wires, the sensor break monitoring can be switched off. User-definable output: $\leq 3.6 \text{ mA}$ , $\geq 21 \text{ mA}$ or customized
Controlled output for instrument calibration	You can set the transmitter to automatically provide a recurring output current regardless of the input signal; the total time for the controlled output is adjustable up to 30 minutes.
Dampening	This function dampens undesired instabilities on the input signal; the dampening time is the time required for the output to reach 90% of its final value after a step change has been applied to the input (in addition to the update time); it is ca. 2 seconds.
Loop check-up	The transmitter works as an accurate current generator.

## Measuring accuracy

Accuracy	RTD and thermocouple: for detailed information refer to <i>RTD and T/C accuracy table</i> on page 46.
	Typically $\pm 0.1\%$ of input span: <ul style="list-style-type: none"> <li>• RTD: Max. of <math>\pm 0.2\text{ °C}</math> / <math>\pm 0.4\text{ °F}</math> or <math>\pm 0.1\%</math></li> <li>• Resistance / potentiometer: Max. of <math>\pm 0.1\text{ Ohm}</math> or <math>\pm 0.1\%</math></li> <li>• Voltage and thermocouple: Max. of <math>\pm 20\text{ }\mu\text{V}</math> or <math>\pm 0.1\%</math></li> </ul>
Linearity	RTD, resistance / potentiometer and voltage: $\pm 0.1\%$
	Thermocouple: $\pm 0.2\%$
Temperature influence	RTD and thermocouple: for detailed information refer to <i>RTD and T/C accuracy table</i> on page 46.
	Resistance and voltage: $\pm 0.01\%$ of span per $^{\circ}\text{C}$ and $\pm 0.006\%$ of span per $^{\circ}\text{F}$
Cold Junction Compensation (CJC)	<b>In-head transmitter:</b> $\pm 0.5\text{ °C}$ @ ref conditions ( $23\text{ °C}$ ) $\pm 0.9\text{ °F}$ @ ref conditions ( $73\text{ °F}$ )
	<b>Rail-mount transmitter:</b> $\pm 0.5\text{ °C}$ @ ref conditions ( $23\text{ °C}$ ) $\pm 0.9\text{ °F}$ @ ref conditions ( $73\text{ °F}$ )
Temperature influence (all inputs)	Reference temperature: $23^{\circ}\text{C}$ / $73^{\circ}\text{F}$
	Max. of $\pm 0.25\%$ of input span per $25^{\circ}\text{C}$ or $\pm 0.25^{\circ}\text{C}$ of input span per $25^{\circ}\text{C}$
	Max. of $\pm 0.28\%$ of input span per $50^{\circ}\text{F}$ or $\pm 0.5^{\circ}\text{F}$ of input span per $50^{\circ}\text{F}$
	Note that if zero-deflection $> 100\%$ of input span, you have to add $0.125\%$ of input span per $25^{\circ}\text{C}$ or $0.14\%$ of input span per $50^{\circ}\text{F}$ per $100\%$ zero-deflection.
Temperature influence CJC (Thermocouple)	Reference temperature: $23^{\circ}\text{C}$ / $73^{\circ}\text{F}$
	$\pm 0.5^{\circ}\text{C}$ per $25^{\circ}\text{C}$ / $\pm 1.0^{\circ}\text{F}$ per $50^{\circ}\text{F}$
Instrument calibration output	$4\text{...}20\text{ mA}$ , $\pm 8\text{ }\mu\text{A}$
Sensor wire resistance influence	RTD and resistance / potentiometer, 3-wire connection: negligible, with equal wire resistance
	RTD and resistance / potentiometer, 4-wire connection: negligible
	Thermocouple and voltage: negligible
Load influence	Negligible
Supply voltage influence	Negligible
RFI influence	In-head transmitter: typically $\pm 0.1\%$ of input span ( $0.15\text{...}80\text{ MHz}$ , $10\text{ V}$ / $80\text{...}1000\text{ MHz}$ , $10\text{ V/m}$ )
	Rail-mount transmitter: typically $\pm 0.2\%$ of input span ( $0.15\text{...}80\text{ MHz}$ , $10\text{ V}$ / $80\text{...}1000\text{ MHz}$ , $10\text{ V/m}$ )
Long-term drift	Max. $\pm 0.1\%$ of input span per year

## Operating conditions

Temperature	
In-head transmitter	Non-Ex version: $-40\text{...}+85^{\circ}\text{C}$ / $-40\text{...}+185^{\circ}\text{F}$ (operating and storage temperature)
	Ex version: $-40\text{...}+85^{\circ}\text{C}$ / $-40\text{...}+185^{\circ}\text{F}$ (storage temperature), for detailed information about the ambient temperatures refer to <i>Temperature data for potentially explosive areas</i> on page 42.
Rail-mount transmitter	Non-Ex version: $-20\text{...}+70^{\circ}\text{C}$ / $-4\text{...}+158^{\circ}\text{F}$ (operating and storage temperature)
	Ex version: $-20\text{...}+70^{\circ}\text{C}$ / $-4\text{...}+158^{\circ}\text{F}$ (operating and storage temperature)
Humidity	$5\text{...}95\%$ relative humidity (non-condensing)

Protection category	
In-head transmitter	Housing: IP50
	Terminals: IP10
Rail-mount transmitter	Housing: IP20
	Terminals: IP20

### Installation conditions

Mounting	In-head transmitter: "B connection head" or larger according to DIN 43729; with the help of the rail mounting kit you can also fix this transmitters on a DIN rail according to DIN 50022 / EN 60715 ( refer to <i>Rail mounting kit for in-head transmitters</i> on page 15).
	Rail-mount transmitter: rail according to DIN 50022 / EN 60715, 35 mm / 1.38".
	For detailed information refer to chapter "Installation".
Weight	In-head transmitter (Ex and Non-Ex version): 50 g / 0.11 lb
	Rail-mount transmitter (Ex and Non-Ex version): 70 g / 0.15 lb
Dimensions	For detailed information refer to <i>Dimensions</i> on page 41.
Materials	
Housing	In-head transmitter: PC + ABS, Polyamide for all versions
	Rail-mount transmitter: PC + Glass fibre for all versions
Flammability acc. to UL	In-head transmitter: V0 (PC + ABS) and V2 (Polyamide)
	Rail-mount transmitter: V0 (PC + glass fibre)

### Electrical connections

Power supply	
In-head transmitter	Non-Ex version: 6.5...36 VDC (2-wire connection)
	Ex version: 8...30 VDC (2-wire connection)
Rail-mount transmitter	Non-Ex version: 7.5...36 VDC (2-wire connection)
	Ex version: 8...30 VDC (2-wire connection)
Current consumption	≤ 21,6 mA
Permissible ripple	4 V p-p at 50/60 Hz
Further data	
Galvanic isolation	1500 VAC, 1 min
	All in- and outputs are electrically isolated from each other and from all other circuits.
Connection	Single/stranded wires: max. 1.5 mm <sup>2</sup> / AWG 16
Polarity protection	Standard for all versions

## Inputs / Outputs

Zero adjustment (all inputs)	Any value within the range limits.
<b>Input - RTD</b>	
Pt100 (IEC 60751, $\alpha = 0.00385$ )	-200...+1000°C / -328...+1832°F (3- and 4-wire connection)
Pt100 (ASTM 1137-97, $\alpha = 0.003902$ )	
Pt100 (JIS C1604-1981, $\alpha = 0.003916$ )	
Pt1000 (IEC 60751, $\alpha = 0.00385$ )	-200...+200°C / -328...+392°F (3- and 4-wire connection)
D100 (Pt100 according to JIS1604, $\alpha = 0.003916$ )	-200...+1000°C / -328...+1832°F (3- and 4-wire connection)
PtX ( $10 \leq X \leq 1000$ ) (IEC 60751, $\alpha = 0.00385$ )	The upper range depends on the X value (3- and 4-wire connection), max. input temperature corresponding to 2000 Ω.
Ni100 (DIN 43760)	-60...+250°C / -76...+482°F (3- and 4-wire connection)
Ni120 (Edison No. 7)	
Ni1000 (DIN 43760)	-100...+150°C / -148...+302°F (3- and 4-wire connection)
Cu10 (Edison No. 15)	-200...+260°C / -328...+500°F
Minimum span	10°C / 18°F (Pt100/1000, Ni100/1000)
Sensor current	ca. 0.4 mA
Maximum sensor wire resistance	25 Ω / wire
<b>Input - resistance / potentiometer</b>	
Range (resistance)	0...2000 Ω
Range (potentiometer)	0...2000 Ω (3- and 4-wire connection)
Minimum span	10 Ω
Sensor current	ca. 0.4 mA
Customized linearization	9 points
Maximum sensor wire resistance	25 Ω / wire
<b>Input - thermocouples</b>	
T/C type C - W5Re-W26Re	-10...+2300°C / 14...+4172°F
T/C type B - Pt30Rh-Pt6Rh (IEC 60584)	0...+1800°C / +32...+3272°F
T/C type E - NiCr-CuNi (IEC 60584)	-200...+1000°C / -328...+1832°F
T/C type J - Fe-CuNi (IEC 60584)	-200...+1000°C / -328...+1832°F
T/C type K - NiCr-NiAl (IEC 60584)	-200...+1350°C / -328...+2462°F
T/C type L - Fe-CuNi (DIN 43710)	-200...+900°C / -328...1652°F
T/C type N - NiCrSi-NiSiMg (IEC 60584)	-270...+1300°C / -454...+2372°F
T/C type R - Pt13Rh-Pt (IEC 60584)	-50...+1750°C / -58...+3182°F
T/C type S - Pt10Rh-Pt (IEC 60584)	-50...+1750°C / -58...+3182°F
T/C type T - Cu-CuNi (IEC 60584)	-200...+400°C / -328...+752°F
T/C type U - Cu-CuNi (DIN 43710)	-200...+600°C / -328...+1112°F
Voltage	-10...+500 mV
Minimum span	2 mV

Input impedance	>10 M $\Omega$
Maximum wire loop resistance	500 $\Omega$ (total loop)
Cold Junction Compensation (CJC)	Internal or none (0°C)
<b>Input - voltage</b>	
Range	-10...+500 mV
Minimum span	2 mV
Customized linearization	Up to 9 points
Input impedance	>10 M $\Omega$
Maximum wire loop resistance	500 $\Omega$ (total loop)
<b>Output</b>	
Output signal	4...20 mA, 20...4 mA or customized; temperature, resistance or voltage linear, customized linearization possible.
	Span: 3.8...20.5 mA (measurement), 3.5...21.6 mA (failure)
	Resolution: 5 $\mu$ A
Update time	Approx. 1.5 seconds
Selectable dampening time	0 or 2 s (time constant)
NAMUR compliance	Current limitations and failure currents acc. to NAMUR NE 43
<b>Configuration</b>	
TempSoft	The PC configuration software, TempSoft, is a versatile and user-friendly tool for transmitter configuration, loop check-up and sensor diagnostics. It runs on Windows 2000, XP, Vista and Windows 7.


### Approvals and certifications

CE	The device fulfils the statutory requirements of the EC directives. The manufacturer certifies that these requirements have been met by applying the CE marking.
Electromagnetic compatibility	According to EN 61326-1:2006
<b>Ex approvals</b>	
Non-Ex version	Without
ATEX	Intrinsically safe according to ATEX Directive 94/9/EC harmonized standards In-head transmitter: EN 60079-0:2006, EN 60079-11:2007 and EN 60079-26:2007. Rail-mount transmitter: EN 60079-0:2006, EN 60079-11:2007
Electromagnetic compatibility	Directive: 2004/108/EC
	Harmonized standards according to EN 61326-1:2006
Vibration resistance	Acc. to IEC 60068-2-6; tested: In-head: 10 g, 60...2000 Hz, Rail: 5 g, 60...500 Hz
Shock resistance	Acc. to IEC 60068-2-31, tested for Drop and Topple, IEC 60068-2-31
NAMUR	Output limitations and fail currents according to NAMUR recommendations.




## 7.3 Dimensions

### In-head transmitter

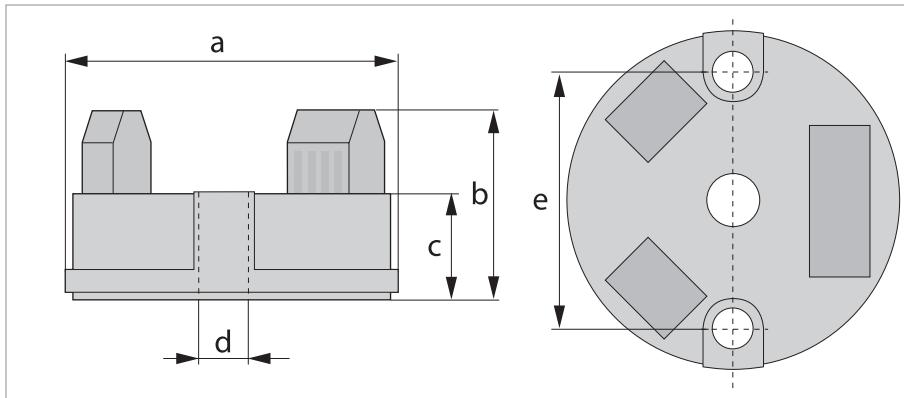

	Dimensions	
	[mm]	[inch]
a	44	1.73
b	26	1.02
c	16	0.63
d	7	0.28
e	33	1.30

## Rail-mount transmitter

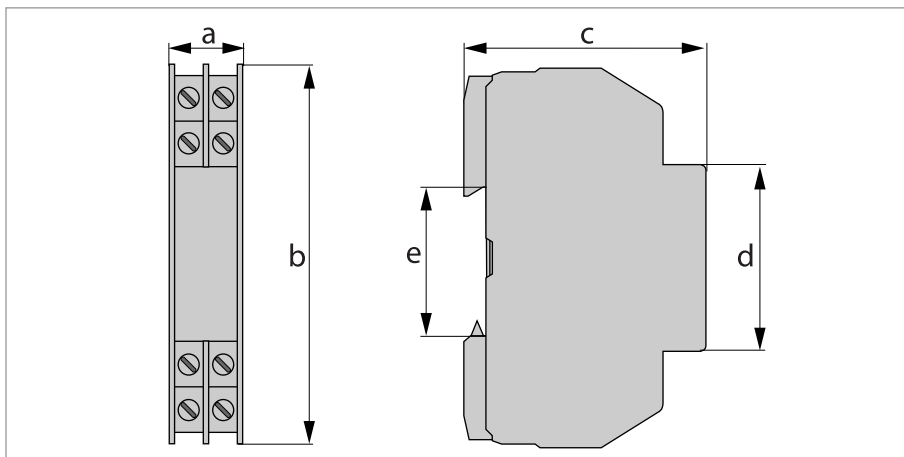

	Dimensions	
	[mm]	[inch]
a	17.5	0.69
b	90	3.54
c	58	2.28
d	45	1.77
e	35	1.38


## 7.4 Temperature data for potentially explosive areas

## In-head transmitter (Ex version)

Temperature class	Ambient temperature $T_a$
T6	$-40^{\circ}\text{C} \leq T_a \leq +50^{\circ}\text{C}$ / $-40^{\circ}\text{F} \leq T_a \leq +122^{\circ}\text{F}$
T5	$-40^{\circ}\text{C} \leq T_a \leq +65^{\circ}\text{C}$ / $-40^{\circ}\text{F} \leq T_a \leq +149^{\circ}\text{F}$
T4	$-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$ / $-40^{\circ}\text{F} \leq T_a \leq +185^{\circ}\text{F}$

## 7.5 Output load diagram

### In-head transmitter (Non-Ex)

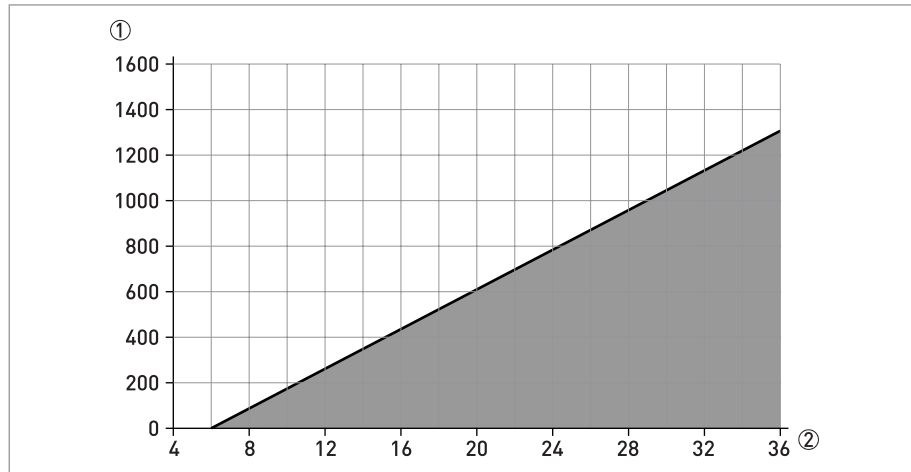


① Total output load  $R_{Load}$  [ $\Omega$ ]

② Supply voltage U [VDC]

Formula for the maximum permissible output load of the in-head version (Non-Ex):  
 permissible  $R_{Load}$  [ $\Omega$ ] =  $(U - 6.5) / 0.022$

### In-head transmitter (Ex)

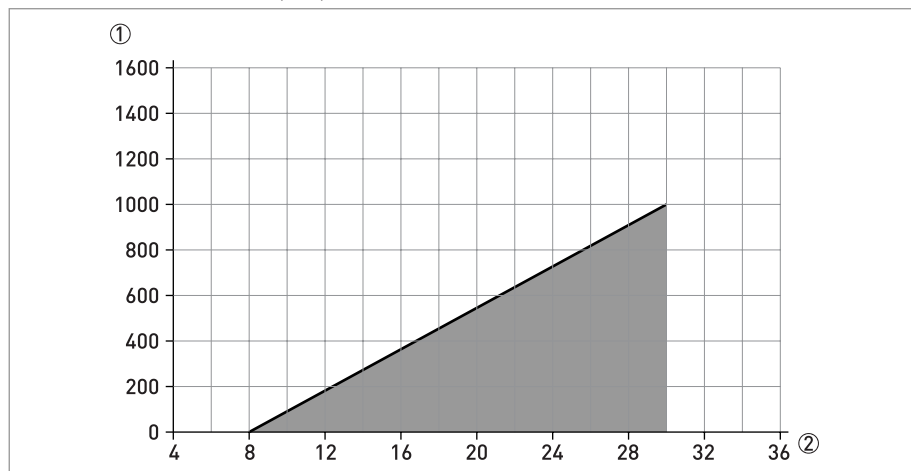


① Total output load  $R_{Load}$  [ $\Omega$ ]

② Supply voltage U [VDC]

Formula for the maximum permissible output load of the in-head version (Ex):  
 permissible  $R_{Load}$  [ $\Omega$ ] =  $(U - 8.0) / 0.022$


**Rail-mount transmitter (Non-Ex)**

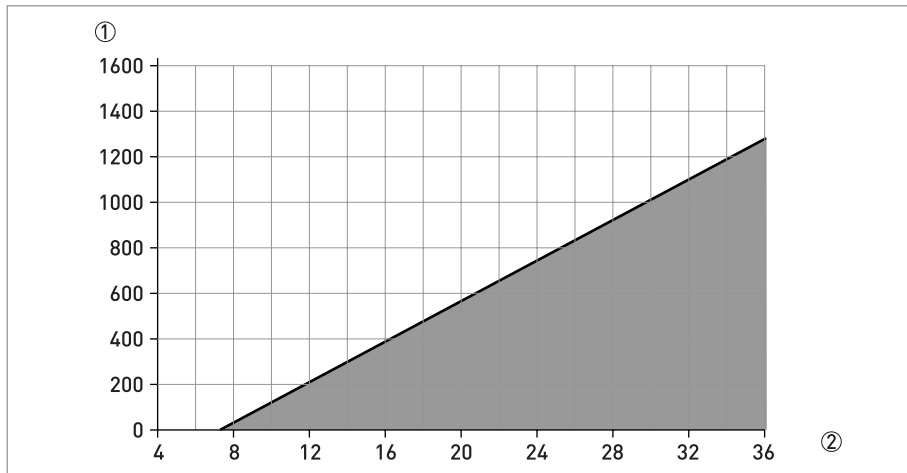

- ① Total output load R<sub>Load</sub> [Ω]
- ② Supply voltage U [VDC]

Formula for the maximum permissible output load of the rail-mount version:  
 permissible R<sub>Load</sub> [Ω] = (U-7.5)/0.022

**Rail-mount transmitter (Ex)**

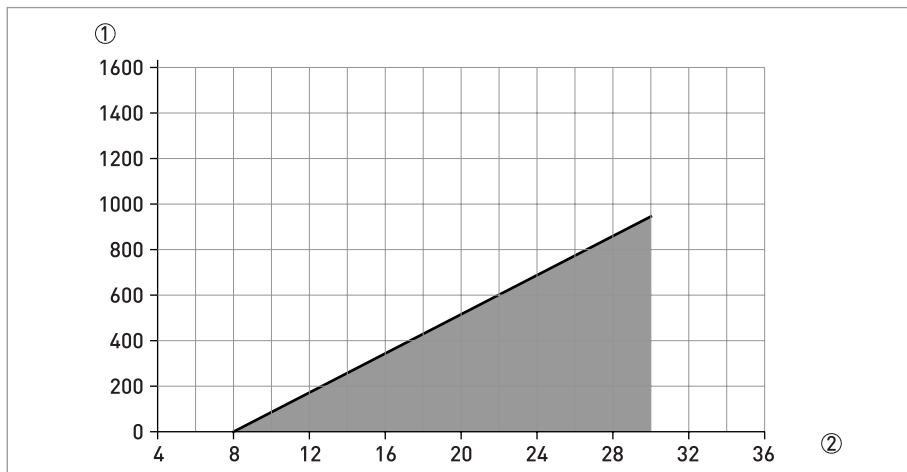

- ① Total output load R<sub>Load</sub> [Ω]
- ② Supply voltage U [VDC]

Formula for the maximum permissible output load of the rail-mount version (Ex):  
 permissible R<sub>Load</sub> [Ω] = (U-8.0)/0.022

## 7.6 Electrical data for outputs and inputs of the Ex versions

### In-head transmitter (Ex version)

Output terminals 5, 6 ①		Input terminals 1, 2, 3, 4 ②	
Max. voltage to transmitter	$U_i = 30 \text{ VDC}$	Max. voltage from transmitter	$U_o = 30 \text{ VDC}$
Max. current to transmitter	$I_i = 100 \text{ mA}$	Max. current from transmitter	$I_o = 25 \text{ mA}$
Max. power to transmitter	$P_i = 900 \text{ mW}$	Max. power from transmitter	$P_o = 188 \text{ mW}$
Internal inductance	$L_i \sim 0 \text{ mH}$	Max. inductance (input loop)	$L_o \sim 50 \text{ mH}$
Internal capacitance	$C_i \sim 1 \text{ nF}$	Max. capacitance (input loop)	$C_o \sim 66 \text{ nF}$

### Rail-mount transmitter (Ex version)

Output terminals 5, 6 ①		Input terminals 1, 2, 3, 4 ②	
Max. voltage to transmitter	$U_i = 30 \text{ VDC}$	Max. voltage from transmitter	$U_o = 30 \text{ VDC}$
Max. current to transmitter	$I_i = 100 \text{ mA}$	Max. current from transmitter	$I_o = 27 \text{ mA}$
Max. power to transmitter	$P_i = 900 \text{ mW}$	Max. power from transmitter	Not specified
Internal inductance	$L_i \sim 0 \text{ mH}$	Max. inductance (input loop)	$L_o \sim 50 \text{ mH}$
Internal capacitance	$C_i \sim 1 \text{ nF}$	Max. capacitance (input loop)	$C_o \sim 52 \text{ nF}$

① Current loop

② Intrinsically safe sensor connection

## 7.7 RTD and T/C accuracy table

Conformance level 95% ( $2\sigma$ )

CJC = Cold Junction Compensation

### Accuracies in °C

Input type	Temp. range [°C]	Min. span [°C]	Max. accuracy	Max. temp. influence (dev. from ref. temp. 23°C)
RTD Pt100	-200...+1000	10	Max. of $\pm 0.2^\circ\text{C}$ or $\pm 0.1\%$ of input span ①	Max. of $\pm 0.01^\circ\text{C}$ per $^\circ\text{C}$ or $\pm 0.01\%$ of input span per $^\circ\text{C}$ ②
RTD Pt1000	-200...+200			
RTD PtX ③	-200...max. input temp (corresp. to 2 k $\Omega$ )			
RTD Ni100	-60...+250			
RTD Ni120	-70...+300			
RTD Ni1000	-100...+150			
RTD Cu10	-200...+260			
RTD Pt100 ( $\alpha = 0.003902$ )	-200...+1000	10		
RTD Pt100 ( $\alpha = 0.003916$ )	-200...+1000			
T/C type B	0...+1800	Corresp. to 2 mV		
T/C type C	-10...+2300			
T/C type E	-200...+1000			
T/C type J				
T/C type K	-200...+1350			
T/C type L	-200...+900			
T/C type N	-270...+1300			
T/C type R	-50...+1750			
T/C type S				
T/C type T	-200...+400			
T/C type U	-200...+600			
T/C custom	-10...+500 mV			

① Linearity error is not included

② If zero-deflection is > 100% of input span then you have to add 0.005% of input span per  $^\circ\text{C}$  per 100% zero-deflection!

③ ( $10 \leq X \leq 1000$ )

④ Linearity error and CJC error is not included

⑤ Temp. influence CJC is not included; also note that if zero-deflection is > 100% of input span: add 0.005% of input span per  $^\circ\text{C}$  per 100% zero-deflection!

## Accuracies in °F

Input type	Temp. range [°F]	Min. span [°F]	Max. accuracy	Max. temp. influence (dev. from ref. temp. 73°C)
RTD Pt100	-328...+1832	18	Max. of $\pm 0.4^\circ\text{C}$ or $\pm 0.1\%$ of input span ①	Max. of $\pm 0.01^\circ\text{F}$ per $^\circ\text{F}$ or $\pm 0.006\%$ of input span per $^\circ\text{F}$ ②
RTD Pt1000	-328...+392			
RTD PtX ③	-328...max. input temp (corresp. to 2 k $\Omega$ )			
RTD Ni100	-76...+482			
RTD Ni120	-94...+572			
RTD Ni1000	-148...+302			
RTD Cu10	-328...+500	180		
RTD Pt100 ( $\alpha = 0.003902$ )	-328...+1832	18		
RTD Pt100 ( $\alpha = 0.003916$ )				
T/C type B	+32...+3272	Corresp. to 2 mV	$\pm 20 \mu\text{V}$ or $\pm 0.1\%$ of input span ④	$\pm 0.01^\circ\text{F}$ per $^\circ\text{F}$ or $\pm 0.006\%$ of input span per $^\circ\text{F}$ ⑤
T/C type C	+14...+4172			
T/C type E	-328...+1832			
T/C type J				
T/C type K	-328...+2462			
T/C type L	-328...+1652			
T/C type N	-454...+2372			
T/C type R	-58...+3182			
T/C type S				
T/C type T	-328...+752			
T/C type U	-328...+1112			
T/C custom	-10...+500 mV			

① Linearity error is not included

② If zero-deflection is > 100% of input span then you have to add 0.003% of input span per  $^\circ\text{F}$  per 100% zero-deflection!

③ ( $10 \leq X \leq 1000$ )

④ Linearity error and CJC error is not included

⑤ Temp. influence CJC is not included; also note that if zero-deflection is > 100% of input span then you have to add 0.003% of input span per  $^\circ\text{F}$  per 100% zero-deflection!



### KROHNE product overview

- Electromagnetic flowmeters
- Variable area flowmeters
- Ultrasonic flowmeters
- Mass flowmeters
- Vortex flowmeters
- Flow controllers
- Level meters
- Temperature meters
- Pressure meters
- Analysis products
- Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH  
Ludwig-Krohne-Str. 5  
47058 Duisburg (Germany)  
Tel.: +49 (0)203 301 0  
Fax: +49 (0)203 301 10389  
info@krohne.de

The current list of all KROHNE contacts and addresses can be found at:  
[www.krohne.com](http://www.krohne.com)

**KROHNE**