



OPTISYS TUR 1060 **Technical Datasheet**

Compact measuring system for turbidity


- Measurement according to ISO 7027 / US EPA 180.1
- Data logging and storage of 1 year's measurement and calibration data
- USB interface for easy data exchange

1	Product features	3
1.1	Turbidity measuring system with innovative cuvette technology.....	3
1.2	Options and variants.....	5
1.3	Measuring principle.....	6
2	Technical data	7
2.1	Technical data table	7
2.2	Dimensions and weight	9
3	Installation	10
3.1	General notes on installation	10
3.2	Intended use	10
3.3	Requirements of the device.....	10
3.4	Installation order	11
3.4.1	Placing the desiccant pouch and the humidity indicator	11
3.4.2	Selecting site and mounting	12
3.4.3	Mounting dimensions.....	13
3.4.4	Connecting the hoses.....	14
3.4.5	Water intake	15
3.4.6	Drain vent	15
3.4.7	Inserting and fixing the ultrasonic cuvette with flow-through unit	16
4	Electrical connections	17
4.1	Safety instructions.....	17
4.2	Description of board and cable glands	17
4.3	Circuit breaker and specifications of power supply	18
4.4	Cable specifications.....	18
4.5	Installation order of the electrical connections.....	18
4.5.1	Connecting the cables in the junction box power assembly	19
4.5.2	Alarms terminal (signal output)	20
4.5.3	RS 485 / 4...20 mA signal output.....	21
4.5.4	Connecting the sensor interconnect cable.....	22
5	Order information	23
5.1	Order code	23

1.1 Turbidity measuring system with innovative cuvette technology

The compact turbidity measuring system **OPTISYS TUR 1060** uses the 90° scattered light method to scan liquid samples in a glass cuvette. This means that the measurement optics are not directly exposed to the sample and thus require less maintenance.

Because the measuring cuvette can be simply and quickly replaced by standard calibration cuvette of known turbidity, a recalibration is possible within a few minutes. Another feature is the automatic ultrasonic cleaning function which removes deposits from the cuvette wall and lengthens service intervals in this way.

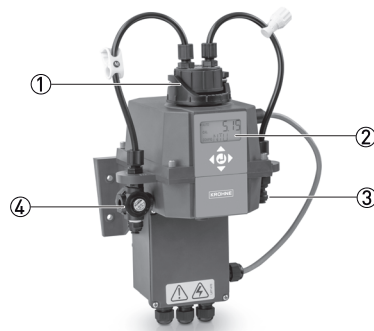

- ① Flow-through unit with cuvette
- ② Display and operating unit
- ③ Sample outlet
- ④ Sample inlet with pressure regulator

The OPTISYS TUR 1060 employs a 32 bit ARM Core Processor and allows for data storage and software updates via a USB flash drive. Data logging of readings and the last four calibrations is built into the instrument.

Highlights

- Improved usability due to easy-to-operate user interface
- Data logging with user-selectable interval (1...60 min) for storage of 1 year's readings and calibration data
- Measuring range: 0...100 NTU/FNU or 0...1000 NTU/FNU
- Rapid response time due to small measurement volume
- 4-20mA and RS-485 Modbus outputs simultaneously
- Simple calibration with reusable liquid calibration standards
- Integrated shut-off valve for maintenance work
- Optimal back pressure setting to avoid gas bubbles through integrated outlet valve
- Minimal maintenance due to ultrasonic cleaning system
- Long lasting light source
- USB Interface for data download
- Calibration completed in < 5 Min
- Flexible usage of measurement ranges with one unit possible if calibration data stored on USB-key

Industries

- Potable water treatment
- Water supply
- Process industry

Applications

- Monitoring of potable water quality in pumping stations
- Monitoring the filtered water quality
- Filter monitoring (efficiency and breakage)
- Poolwater monitoring (Pump controlling and efficiency)
- Monitoring the unfinished disinfected water quality

1.2 Options and variants

White or infrared light version



The OPTISYS TUR 1060 is available with two different light sources. One with a NIR-LED for compliance with ISO 7027 and alternatively a version with a white light lamp for compliance with US EPA 180.1 regulation.

Additionally a version with an extended measuring range of 1000 NTU/FNU is available.

Calibration kit



The calibration kit contains three cuvettes with liquids of three different turbidities (0.02, 10, 100 / 1000 NTU/FNU). With the help of this accessory you can do a precise recalibration within a few minutes.

1.3 Measuring principle

According to the US EPA definition, turbidity is the cloudy appearance of water caused by the presence of suspended and colloidal matter. In the waterworks field, a turbidity measurement is used to indicate the clarity of water. Technically, turbidity is an optical property of the water based on the amount of light reflected by suspended particles and colloidal matter.

According to ISO 7027 turbidity values below < 40 NTU are measured with the 90° scattered light method. Light source and receiver are positioned in a 90° angle to each other. The light transmitted from the source is directed in equal strength to the reference receiver and into the medium. The light is reflected from the particles and fractions of the scattered light are received by the detector, which is positioned in a 90° angle. The meter compares the light from reference and scattered light receiver and calculates the turbidity value.

The measuring units for the turbidity are:

- NTU (Nephelometric Turbidity Unit)
- FNU (Formazin Nephelometric Unit)

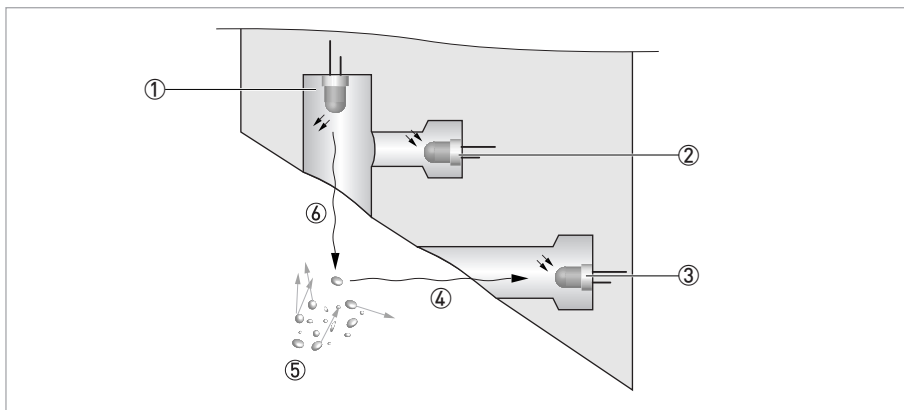


Figure 1-1: Measuring principle for turbidity measurement

- ① Light source
- ② Reference sensor
- ③ Sensor
- ④ Reflected light beam
- ⑤ Particles
- ⑥ Emitted light beam

2.1 Technical data table

- *The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.*
- *Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Downloadcenter).*

Measuring system

Measuring principle	90° scattered light method
Application range	Turbidity measurement of liquids according to ISO 7027 and US EPA 180.1
Measuring range	0...100 NTU/FNU and 0...1000 NTU/FNU factory configured

Design

The measurement system consists of a sensor and a signal converter and is only available as compact version.	
Display and user interface	
Display	Multi-line liquid crystal backlight display
Operating and display language	English
Other properties	
Response time	Adjustable 1...60 seconds
Alarms	Two programmable, 120...240 VAC, 2A form C relay

Measuring accuracy

Reference conditions	+1...+50°C / +33.8...+122°F
	95% relative humidity
	Altitude up to 2000 m / 6600 ft
Accuracy	< 40 NTU/FNU: ±2% of reading or ±0.02 NTU/FNU whichever is greater (0...100 or 0...1000 NTU/FNU range)
	> 40 NTU/FNU: ±5% of reading (0...100 or 0...1000 NTU/FNU range)
	±2% of reading or ±0.02 NTU/FNU (0...10 NTU/FNU range)
Resolution	0.0001 NTU/FNU (below 10 NTU/FNU) selectable

Operating conditions

Note: the device is not appropriate for outdoor use!	
Temperature	
Process and ambient temperature	+1...+50°C / +34...+122°F
Storage temperature	-20...+60°C / -4...+140°F
Pressure	
Process pressure	1...7 bar / 14.5...101,5 psi (built-in regulator set at 1 bar / 14.5 psi)
Ambient pressure	Atmospheric, altitude up to 2000 m / 6600 ft
Flow velocity	
Minimum	0.1 l/min / 0.026 gal/min
Maximum	1.5 l/min / 0.40 gal/min
Other conditions	
Humidity	Display and operating unit: up to 95% relative humidity (non-condensing)
Protection category	Enclosure is designed to meet IP 66 / NEMA 4X

Installation conditions

Dimensions	For detailed information refer to <i>Dimensions and weight</i> on page 9.
Weights	Instrument weight: 1.8 kg / 4.0 lbs Shipping weight: 2.8 kg / 6.17 lbs

Materials

Sensor housing	ABS
Wetted parts	Nylon, borosilicate glass, silicon, polypropylene, stainless steel AISI 304, Viton, Acetyl

Electrical connections

Galvanic insulation	Double insulated, pollution degree 2, over voltage category II (all in- and outputs are electrically isolated from each other and from power and earth ground)
Power supply	
Voltage	100...240 VAC, 47...63 Hz
Power consumption	80 VA
Outputs	
Current output	1 x 4...20 mA, active, 15 VDC power source, max. load 1 kΩ
Modbus	Bi-directional, RS-485 Modbus RTU/ASCII
Relays	2 x relay 120...240 VAC, 2 A, freely programmable


Software

Data storage	Upgradeable via USB flashdrive 16 GB via USB flashdrive
--------------	--

Approvals and certifications

CE	This device fulfils the statutory requirements of the EC directives. The manufacturer certifies successful testing of the product by applying the CE mark.
LC	Listed to UL 61010-1 (Ed.3) and certified to CAN/CSA 22.2 No. 61010-1-12 (R2017)

2.2 Dimensions and weight

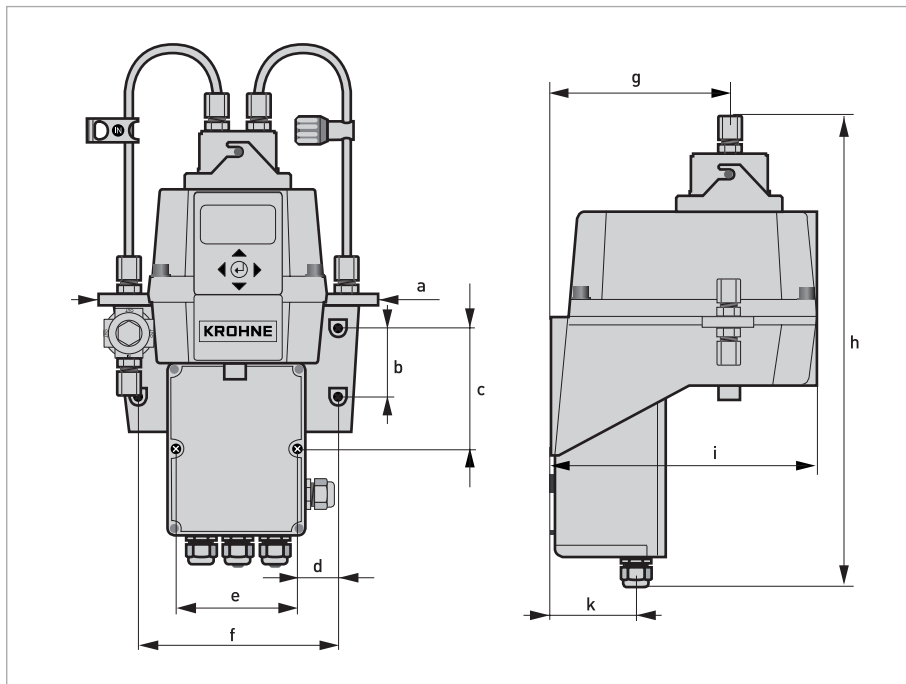

	Dimensions	
	[mm]	["]
a	208	8.19
b	51	2.0
c	88.77	3.5
d	30	1.18
e	87	3.43
f	148	5.83
g	133.71	5.26
h	350	13.79
i	198	7.8
k	62	2.44

Shipping weight: 2.8 kg / 6.17lbs

3.1 General notes on installation

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2 Intended use

The OPTISYS TUR 1060 is available in white light and infrared versions. Both versions are designed to measure online the turbidity of water. Furthermore the two following different measuring ranges are available: 0...100 NTU/FNU or 0...1000 NTU/FNU

3.3 Requirements of the device

The device must not be heated by radiated heat (e.g. exposure to the sun) to a electronics housing surface temperature above the maximum permissible ambient temperature. If it is necessary to prevent damage from heat sources, a heat protection (e.g. sun shade) has to be installed.

The device was designed to require very low input pressure. Though the device offers a wide pressure range, as it has an integrated pressure regulator:

- Input pressure range: 0.01...7 bar / 14.5...101.5 psi (built in regulator set at 1 bar / 15 psi)
- Maximum allowable flow rate of the cuvette: 0.1...1,5 l/min / 0.026...0.4 gal/min
- Maximum fluid temperature: +50°C / +122°F

3.4 Installation order

Installation, assembly, start-up and maintenance may only be performed by appropriately trained personnel. The regional occupational health and safety directives must always be observed.

To install the device in the correct way, follow the order of the following sections and their instructions.

3.4.1 Placing the desiccant pouch and the humidity indicator

A missing or saturated desiccant pouch affects not only the performance of the whole device, but can also destroy the internal electronics!

If the seal at the device base does not fit properly or is defective, the lifetime of the desiccant decreases. Therefore assure the following items:

- *Do not start-up the device with a desiccant pouch missing, replace a saturated pouch!*
- *Replace the desiccant pouch when the display shows the message "DESC".*
- *Inspect the enclosure seal each time you replace the desiccant.*
- *If the seal is not properly seated or damaged, reseal or replace it!*

Execute the following steps to insert or replace the desiccant pouch and the humidity indicator (Humonitor® card) or to inspect the seal:

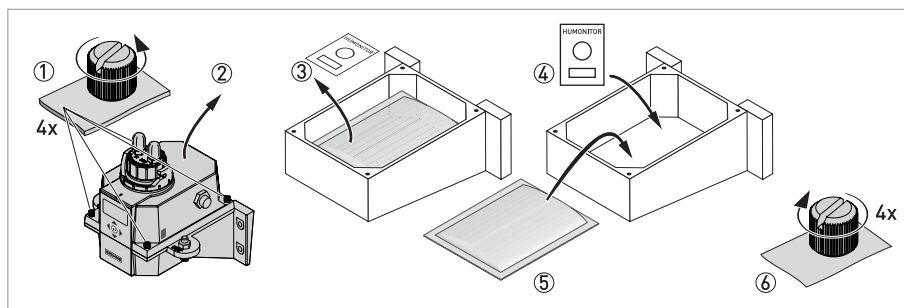


Figure 3-1: Desiccant pack (desiccant pouch with humidity indicator)

The desiccant degrades prematurely after removing the protective packaging. Therefore do not open the packaging before usage, install the desiccant pouch quickly and close the device as soon as possible.

- Move the lock ring counterclockwise and pull out the ultrasonic cuvette with flow-through unit (detailed information on page 16).
- Unscrew the four corner screws of the electronic device manually according to ① in the drawing (if the screws are too tight, use a screwdriver for slotted screws).
- Remove the upper half of the electronic device ②.
- Prior to installing the desiccant pouch for the first time, remove the shipping support (plastic tube with a red flag reaching outside) within the upper part of the device; after removing you can discard the tube.
- If you want to replace the desiccant pouch and the humidity indicator, take them out at first ③.
- Take the shrink packed desiccant pouch and the humidity indicator out of the protective packaging.

- Put the humidity indicator on the bottom of the lower part of the electronic device and lay the desiccant pouch on it ④ and ⑤.
- Inspect the seal and reseal or replace it if necessary.
- Reassemble everything in reverse order ⑥.
- To expedite the recognition of the new desiccant, reset the powered device by disconnecting the sensor interconnect cable for two seconds and reconnecting it.

3.4.2 Selecting site and mounting

The preferred way of mounting of the device is wall mounting. If this is not possible, you can mount the device on any suitable level surface. Irrespective of this possibilities always note the following guidelines:

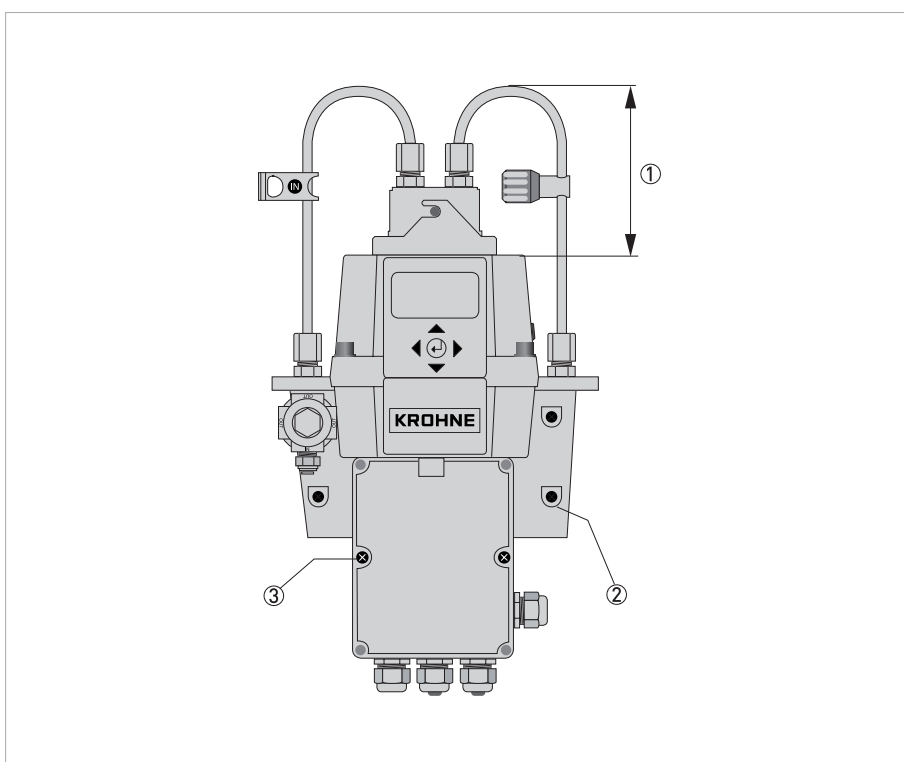


Figure 3-2: Selecting site and mounting

- Choose a location that is easily accessible for operation and service and that is as close as possible to the sampling point to ensure a quick response time (maximum distance: 3 m / 10 ft)
- Leave at least 20 cm / 8" of free space above the device for easy service (e.g. removal of the flow head and insertion of calibration cuvettes), see position number ① in the drawing.
- Ensure that the front display rests at eye level.
- Refer to chapter "Dimensions" for the device dimensions.
- Use screws M6 / 1/4" to fix the electronic device ② and M4 / 3/16" to fix the junction box power assembly ③.

The design of the device recommends that the junction box power assembly cradles in a hutch below the electronic device. Therefore the correct procedure is to fix the junction box power assembly first and then mount the electronic device on top of it.


Mounting procedure

- Take a water-level, a pencil and ruler and use the dimensions provided in the handbook to mark the six mounting hole locations on the mounting surface.
- Drill six holes into the mounting surface and insert six screw anchors into them.
- Use screws M4 / 3/16" to fix the junction box power assembly at first.
- Put the electronic device on top of the junction box power assembly and use screws M6 / 1/4" to fix it.

3.4.3 Mounting dimensions

Please do not use this directly as mounting template as the printed dimensions here differ from reality!

Leave at least 20 cm / 8" of free space above the device for easy service (e.g. removal of the flow head and insertion of calibration cuvettes).

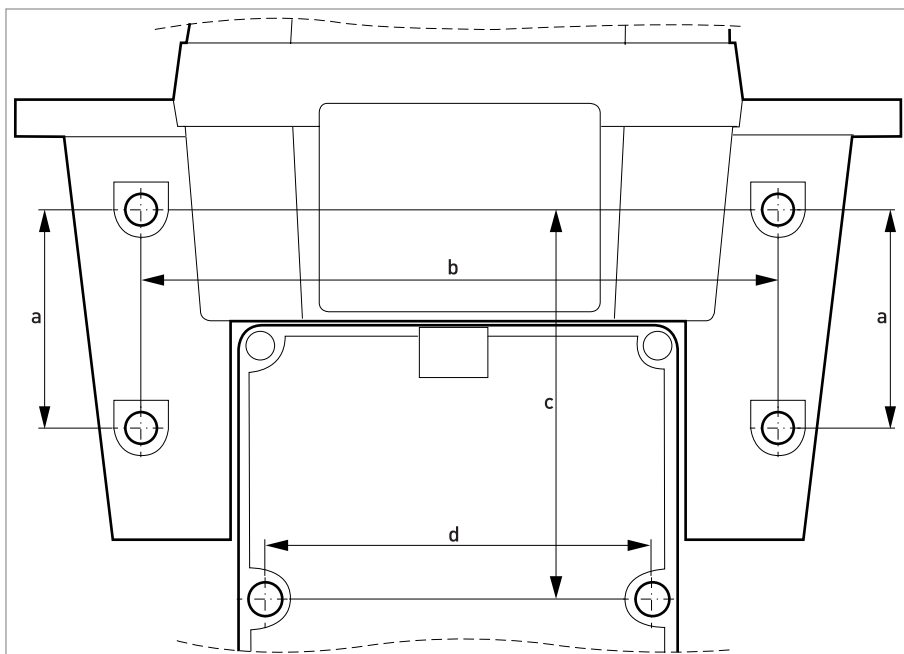

	[mm]	[""]
a	51	2.0
b	147	5.79
c	90	3.54
d	87	3.43

3.4.4 Connecting the hoses

The scope of delivery contains two tubings with fittings (intake tubing, drain tubing) for the connection between the flow-through unit and the flow intake and flow drain. The intake tubing has a shut-off clamp and the drain tubing has a backpressure valve. Connect the hoses according to the following drawing:

Do not connect the sensor interconnect cable with the upper part of the device now and regard the installation order in the chapter "Electrical connections"! The reason is that you will have to do the internal wiring at first and the connection of the sensor interconnect cable afterwards, the reverse order could damage the device!

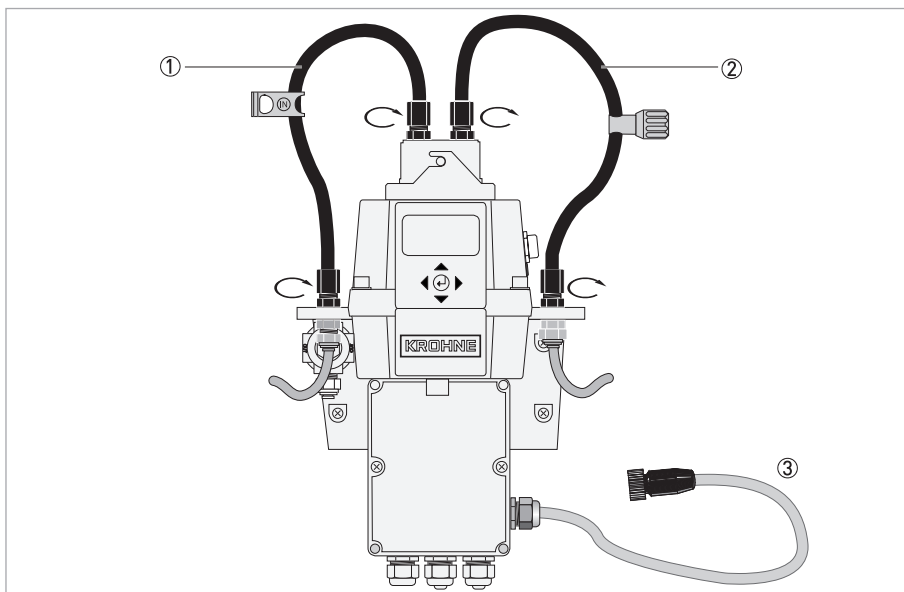


Figure 3-3: Connecting the hoses

- ① Intake tubing with shut-off clamp
- ② Drain hose with backpressure valve
- ③ Sensor interconnect cable

The hose for the connection between the sampling point and the device as well as the hose for the flow drain do not belong to the scope of delivery. For this purpose use hoses with the following specifications:

- 1/4 inch OD flexible tubing
- Opaque hose material to prevent algae growth if direct sunlight can reach the hose.

To prevent that the drain water causes any damages, assure that the drain hose leads to a suitable drain site.

3.4.5 Water intake

Only water which is free of corrosive chemicals or other dangerous substances may be used.

Select a hose diameter of 1/4 inches OD (polyethylene or polypropylene). Make sure that the hose is long enough to connect the drain directly to a suitable location. Ensure that there are no kinks, twists, fractures or damage of any kind in the hoses.

Slide the hose into the Quick Connect fitting on the right-hand side and check that the hose is completely pressed against the stop.

Pull carefully but firmly on the pipe to check if it is secured.

3.4.6 Drain vent

The device must be routed to a suitable sanitary sewer drain.

Do not return the drain sample or any water into the process stream or into any potable water supply.

Select a hose diameter of 1/4 inches OD (polyethylene or polypropylene). Make sure that the hose is long enough to connect the drain directly to a suitable location. Ensure that there are no kinks, twists, fractures or damage of any kind in the hoses.

Slide the hose into the Quick Connect fitting on the right-hand side and check that the hose is completely pressed against the stop.

Pull carefully but firmly on the pipe to check if it is secured.

3.4.7 Inserting and fixing the ultrasonic cuvette with flow-through unit

Never insert a cuvette with visible moisture or water on the glass or the transducer into the upper part of the device, because this could destroy or damage the electronics or the transducer! Always clean and dry the cuvette with a soft cloth just before inserting it. The dehumidification system cannot remove large droplets of water, only residual moisture!

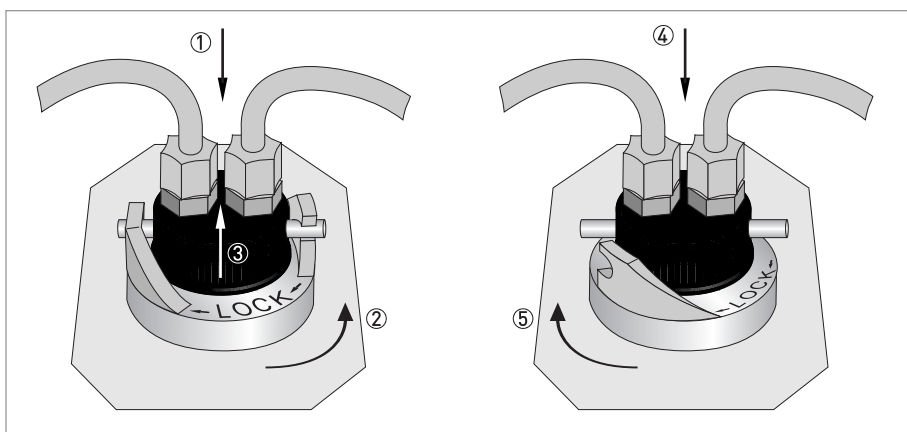


Figure 3-4: Procedure for inserting and fixing the ultrasonic cuvette with flow-through unit

Inspect the interior, O-rings and cuvette regularly for damages. If necessary replace the component. Make sure that the cuvette is sealed correctly.

The device can only detect a new cuvette if it works in the normal operation mode ("AUTO"). If the device operates correctly after inserting a new cuvette, "AUTO" will flash on the display.

4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Description of board and cable glands

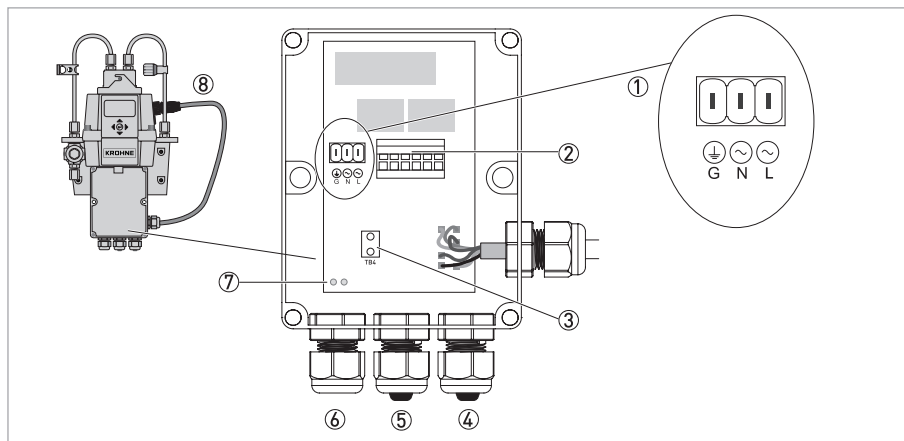


Figure 4-1: Description of board and cable glands

- ① Power supply terminal block
- ② Alarms relay, 4...20 mA/RS 485 terminal block
- ③ Power cable strain relief
- ④ 4...20 mA/RS 485 cable gland
- ⑤ Alarm cable gland
- ⑥ Power cable gland
- ⑦ Holes for strain relief strap
- ⑧ Sensor interconnect cable

All of the electrical connections to the device run via the junction box power assembly. For shipment the manufacturer inserts plugs into the alarm and the 4...20 mA/RS 485 cable gland to waterproof the device.

4.3 Circuit breaker and specifications of power supply

The manufacturer strongly recommends to place a circuit breaker prior to the power connection. Use this circuit breaker to de-energise all cables before starting any installation or service work, otherwise a perilous electric shock can happen.

The device has a switching power supply which demands 100...240 VAC and 47...63 Hz. To avoid damage or destruction of the device always assure that the power supply meets this specifications!

The power cord does not belong to the scope of delivery.

4.4 Cable specifications

- The power cable glands accept the following cable diameter range: 5.8...10 mm / 0.23...0.39".
- All terminals accept wires in the range of 12...30 AWG / 0.05...3 mm²
- Stripping of insulation to a length of 6 mm / 1/4".

4.5 Installation order of the electrical connections

Installation, assembly, start-up and maintenance may only be performed by appropriately trained personnel. The regional occupational health and safety directives must always be observed.

To prevent damage or destruction of all devices, always regard the following items:

- *Ensure that the device itself and all devices that should be connected to the outputs are de-energised before establishing a cable connection!*
- *Before fixing a cable, look on the labels on the board and especially regard polarities!*

To establish the electrical connections in the correct way, follow the order of the following sections and their instructions.

4.5.1 Connecting the cables in the junction box power assembly

The device involves a line voltage that could endanger life! Only qualified electricians are allowed to perform the electrical installation of the device. Always note all local and government recommendations and methods for installation of electrical connections to and between the device and other peripheral devices.

The manufacturer accepts no responsibility that the device is watertight again after the electrical installation. Assure the water tightness after the terminal box was wired for operation. If any of the cable glands does not tighten a cable or plug properly this jeopardises the ratings of the device and may cause a perilous electric shock.

Connection procedure

- Open the junction box with a screwdriver.
- Strip all needed wires to a length of 6 mm / 1/4" ①.
- Fix the cables in the clamp and put the clamp in the terminal like in the following drawing to ②.
- Use the strain relief strap to reduce the tension on the power terminals ③.
- Close the terminal box and assure that it is properly sealed.

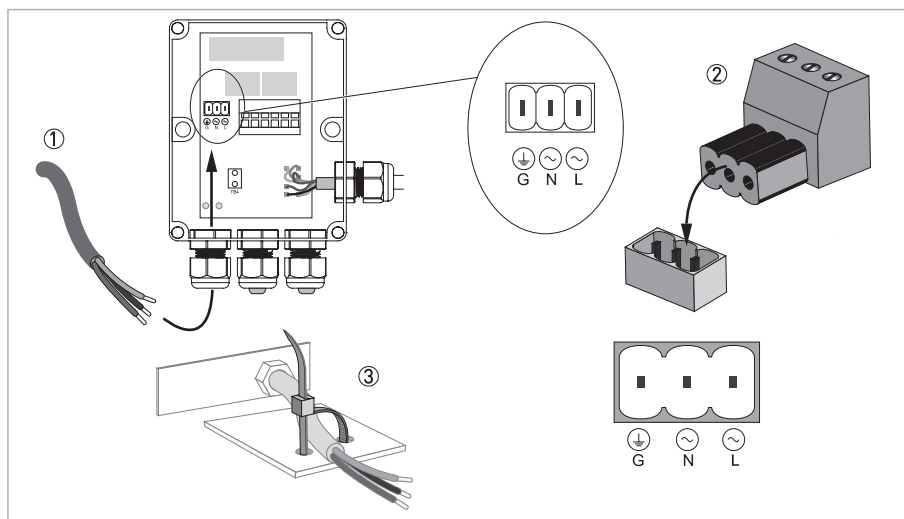


Figure 4-2: Connecting the cables in the junction box

4.5.2 Alarms terminal (signal output)

The terminal block has spring loaded connections. To open the connection, insert a 3 mm / 1/8 inch flat blade screwdriver into the slot right above the electrical connection. Pulling up slightly on the screwdriver opens the terminal block connection. Removing the screwdriver tightens the connection. There are two stacked rows of connections which are labeled. The alarm connections are on the upper row. The RS-485 and 4-20mA are on the lower row. These connections are rated for a wire size from 12...30 AWG / 0.05...3 mm², either solid or stranded.

The terminals "ALARM 1" and "ALARM 2" are mechanical relays rated at 120 ...240 VAC and 2 A. The abbreviations on the board and below the terminal have the following meanings:

- NO: Normally open
- NC: Normally closed
- C: Common

As the configuration of the alarms is fail-safe, the normal state is a power supplied device and non-active alarms.

Connections are labeled beneath the large terminal block. These connections are on the upper row.

4.5.3 RS 485 / 4...20 mA signal output

The terminal block has spring loaded connections. To open the connection, insert a 3 mm / 1/8 inch flat blade screwdriver into the slot right above the electrical connection. Pulling up slightly on the screwdriver opens the terminal block connection. Removing the screwdriver tightens the connection. There are two stacked rows of connections which are labeled. The alarm connections are on the upper row. The RS 485 and 4...20 mA are on the lower row. These connections are rated for a wire size from 12...30 AWG / 0.05...3 mm², either solid or stranded.

The 4...20 mA output is energised by a 24 VDC power source and can drive loads up to 1 K Ω . It is isolated from line power and earth ground.

The RS 485 half-duplex digital interface (2-wire) operates with differential levels that are unsusceptible to electrical interferences. This is why the usage of cable lengths up to 900 m / 2950 ft is possible. Independent of the output mode (analog or digital) always note the following items:

- For ease of connecting, remove the label on the terminal block (the labels of the connections are beneath this block).
- Do not run 4...20 mA or RS 485 cables in the same conduit as power as this could lead to signal interferences.
- When using the RS 485 interface, equip the last device on each bus with a 120 Ω terminating resistor to eliminate signal reflection on the line.

The electrical connection is independent of the output mode (analog or digital) and is shown in the following figure:

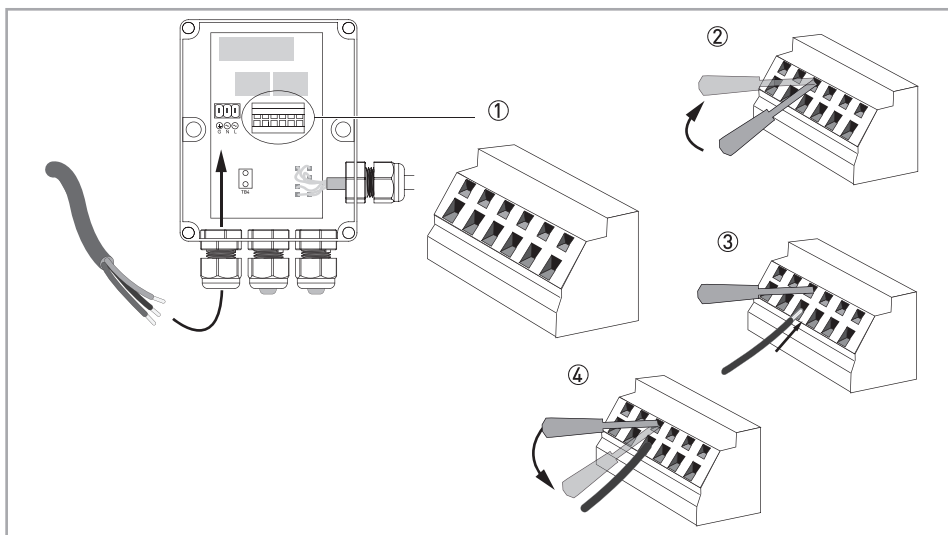


Figure 4-3: Signal output connection

Connection procedure

- Open the junction box with a screwdriver.
- Strip all needed wires to a length of 6 mm / 1/4".
- Fix the cables on the terminal as shown in the drawing ②. to ④
- Use the strain relief strap to reduce the tension on the power terminals.
- Close the terminal box and assure that it is properly sealed.

4.5.4 Connecting the sensor interconnect cable

Always connect the sensor interconnect cable with the upper part of the device last of all! The reason is that if you connect the sensor interconnect cable before the internal wiring, energising the device with power could destroy or damage the device!


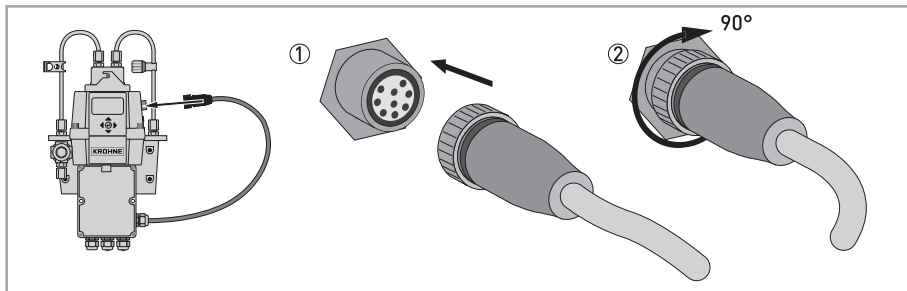


Figure 4-4: Connecting cable

5.1 Order code

The characters of the order code highlighted in light grey describe the standard.

		Type / Housing converter
	2	OPTISYS TUR 1060
		Measuring range
	1	0...100 NTU/FNU
	2	0...1000 NTU/FNU
		Features
	1	EPA 180.1 white light
	2	ISO 7027 infrared light
		Process conditions
	1	+1...+50°C / +34...+122°F, 0...7 bar / 0...101,5 psi
		Signal outputs
	5	1 x 4...20 mA, Modbus (RS 485), simultaneous
		Relays
	2	2 x free programmable
		Operating language
	1	Standard
		Power supply
	1	100...240 VAC
		Options
	0	None
	C	Certificate of compliance (3-point calibration)
		Documentation
	0	None
	1	English
	2	German
	3	French
VGAS	4	Order code

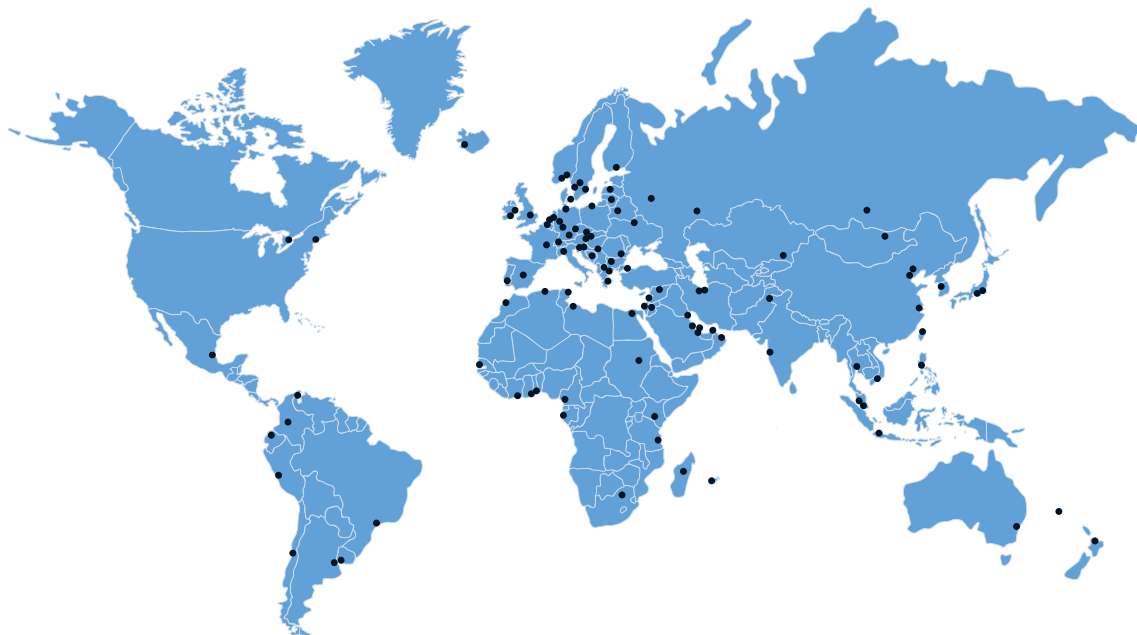

KROHNE – Process instrumentation and measurement solutions

- Flow
- Level
- Temperature
- Pressure
- Process Analysis
- Services

Head Office KROHNE Messtechnik GmbH
Ludwig-Krohne-Str. 5
47058 Duisburg (Germany)
Tel.: +49 203 301 0
Fax: +49 203 301 10389
info@krohne.com

The current list of all KROHNE contacts and addresses can be found at:
www.krohne.com

KROHNE